## **DOR-31000 COMPONENTS**

A: PAN HEAD STUD/LOCATING PIN (1) E: LARGE HEAD STUD/LOCATING PIN (1)

B: SPRING WASHER (1) F: LOCK WASHERS (3)
C: COUPLING DISK (1) G: HEX NUTS (3)
D: SLEEVE NUT (1) H: CAP SCREWS (2)

\*\*NOTE: L-BRACKETS, LOWER FLANGE, & RETAINING BRACKET ARE NOT SUPPLIED COMPONENTS.

- 1. DISSEMBLE OLD JOINT. REMOVE NUTS & BOLTS HOLDING SAFETY RETAINING BRACKET. GRIND HEADS OFF LOCATING PINS TO REMOVE. SAVE RETAINING BRACKET & TWO L SHAPED BRACKETS BETWEEN PIN & COUPLING DISK FOR REASSEMBLY.
- 2. POSITION LOWER FLANGE WITH SLOT FACING UP & MATING SURFACE AWAY & INSERT PAN HEAD STUD [A] THROUGH RIGHT HAND SIDE OF FLANGE. ASSEMBLE SPRING WASHER [B], COUPLING DISK [C] AND ONE L BRACKET ONTO THREADED END OF STUD. THREAD SLEEVE NUT [D] ONTO STUD SO THAT SLEEVE FITS INTO HOLE IN COUPLING DISK.
- 3. PASS THREADED PORTION OF LARGE-HEAD STUD [E] THROUGH SECOND L BRACKET, COUPLING DISK AND LOWER FLANGE. INSTALL LOCK WASHER [F] AND HEX NUT [G] ON FLANGE SIDE OF ASSMBLY, AND TIGHTEN BOTH STUDS.
- 4. REINSTALL JOIN ASSEMBLY ON SPLINTED SHAFT OF STEERING BOX.
- 5. ORIENT UPPER FLANGE (ON LOWER END OF STEERING COLUMN) SO STUDS IN JOIN ARE ALIGNED IN SLOTS IN FLANGE, LARGE-TO-LARGE AND SMALL-TO-SMALL.
- 6. CONNECT COUPLING AND RETAINING BRACKET TO UPPER FLANGE USING CAP SCREWS [H], LOCK WASHERS AND NUT. NOTE THAT SAFETY BRACKET IS ASSEMBLED SO THAT IT COVERS THE HEAD OF STUD [A].
- 7. TIGHTEN ALL FASTENERS WITH APPROPRIATE WRENCH BEING CAREFUL NOT TO OVER-TIGHTEN.



