



LRS-22362D-K

 


LRS-22363D-K



LRS-22364D-K

## 1981–93 Mustang Window Guide Bushing Kits



### Removal

1. Remove the door panel. (*Removal video on next page.*)
2. Remove the guide rod retaining nuts. There will be a nut up top and one at the bottom.
3. Remove the guide rod from the door.
4. Slowly raise your window while holding it steady to gain access to the window bushings brackets.
5. Continue to model-specific instructions below.

### LRS-22362D-K – 1981-88 Convertible/T-Top

6. Unbolt the upper and lower guide rod mount bushing brackets.
7. Install the new guide bushing into new brackets.
8. Bolt the new brackets onto the window assembly, leaving bolts loose.
9. Lower the window back into position.
10. Continue to the reinstallation step below.

### LRS-22363D-K – 1988-93 Convertible

6. Remove the two screws holding the lower bracket onto the assembly
7. Remove the factory bracket from the assembly.
8. Note: The upper bracket is built into the window mount and is not removable.
9. Install a new bushing into the bracket and loosely bolt it in place with the factory screws.
10. Install the new bushing into the upper mount.
11. Bolt the new brackets onto the window assembly leaving the hardware loose.
12. Lower the window back into position.
13. Continue to the reinstallation step below.

### LRS-22364D-K – 1981-93 Coupe/Hatchback

6. The lower bracket has a single screw on one side and a rivet on the other.
7. With the window supported use a rotary tool or a small angle grinder and remove the head of the rivet. Using a punch, remove the remainder of the rivet, then remove the screw holding the other side.
8. Remove the factory bracket from the assembly.
9. Note: The upper bracket is built into the window mount and is not removable. (*cont.*)

(*Installation video on next page.*)

10. Install a new bushing into the bracket and bolt it in place with the factory screw and a 5/16" bolt and nut on the other side (*where the rivet was removed*).
11. Install new bushing into the upper mount.
12. Bolt the new brackets onto the window assembly leaving the hardware loose.
13. Lower the window back into position.
14. Continue to the reinstallation step below

## Reinstallation

1. Position the guide rod assembly back in place.
2. Fully tighten window guide bushing brackets.
3. Install the guide rod hardware and fully tighten it.
4. Adjust the window. You will need to repeat these steps as necessary until you reach proper alignment on the glass. We would like to stress that time can be a factor here due to the tedious adjusting procedures. Do not get overwhelmed, and make sure to set aside plenty of time. Having a buddy give you an extra set of eyes from the outside can be beneficial here while working inside the car.
5. Reinstall the door panel by reversing the removal process.



**Door Panel  
Removal**



**Window Guide  
Bushing Install**

### Disclaimer

By using this instruction sheet, you agree that other than as expressly stated in the LMR Terms and Conditions (Agreement) or as required by the laws of the state of Texas or applicable United States federal law (Applicable Law), this instruction sheet is provided "AS IS" and LMR does not make any specific representations or warranties about this instruction sheet. For example, LMR does not make any warranties about: (a) the content provided in this instruction sheet; (b) any specific features of this instruction sheet, or its accuracy, reliability, or ability to meet your needs. The knowledge and experience level of users of this instruction sheet vary widely; if you do not have adequate knowledge and experience to use this instruction sheet and safely accomplish the tasks described, please hire a professional to assist you for your safety and the safety of your vehicle and others.

### Limitation of Liability

Except as required by Applicable Law, LMR, its affiliates, officers, directors, employees and agents will not be responsible for any loss of profits, revenues, business opportunities, goodwill, or anticipated savings, indirect or consequential loss, punitive damages caused by:

- Errors, mistakes, or inaccuracies in this instruction sheet
- Personal injury or property damage resulting from your use of this instruction sheet

This limitation of liability provision applies to any claim regardless of whether the claim asserted is based on warranty, contract, tort or any other legal theory.

Use this information at your own risk. Any injury, damage, or loss that may result from use of the tools, equipment, products, or information contained in this instruction sheet is the sole responsibility of the user.

### Indemnity

To the extent permitted by Applicable Law, you agree to defend, indemnify and hold harmless LMR, its Affiliates, officers, directors, employees, agents, information providers, licensors, and other partners from and against any and all claims, damages, obligations, losses, liabilities, costs or debt, and expenses (including but not limited to attorney's fees) arising from: (i) your use of and access to this instruction sheet; (ii) your violation of any term of the Agreement; (iii) your violation of any third party right, including without limitation any copyright, property, or privacy right; or (iv) any claim that your actions caused damage to LMR or a third party. The defense and indemnification obligations will survive this Agreement and your use of this instruction sheet.