




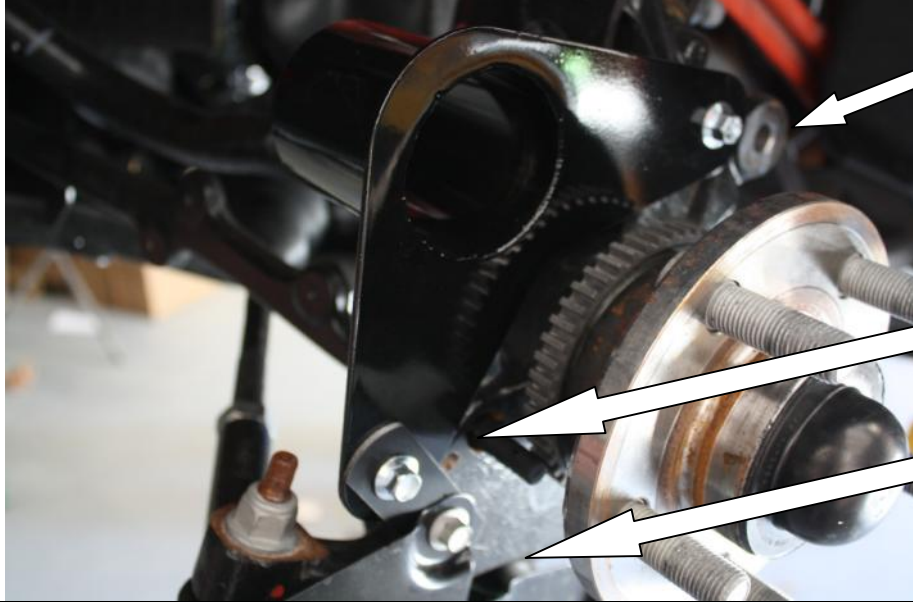
Installation Instructions  
JLT Brake Cooling kit (2015-2017 Mustang GT/V6/EcoBoost)  
#JLTBCK-FM15

Thank you for purchasing our product. Take your time and it will be a smooth install.

Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (2) JLT Grille Bezels, (2) Brake Duct Hoses, (2) Zip ties, (2) JLT backing plates (4) #40 hose clamps (2) brackets and required hardware
2	Gather all of the following tools needed for the installation: Jack, jack stands, lug wrench, 5/16 or 8mm nut driver, 7/32 socket, 15mm socket, 13mm socket and ratchet,
3	Jack car up and secure on jack stands.
4	Remove both front wheels.
5	Remove (2) 15mm bolts and remove brake caliper, rotor and shields from both right and left front.  

6 Using the supplied bolts, nuts and bracket attach the JLT backing plate to the knuckle.




NEW BOLT

NEW BOLT & NUT  
AND BRACKET

EXISTING BOLT

7 Remove 4 push pins from fender liner and pull back to get to the fog light.

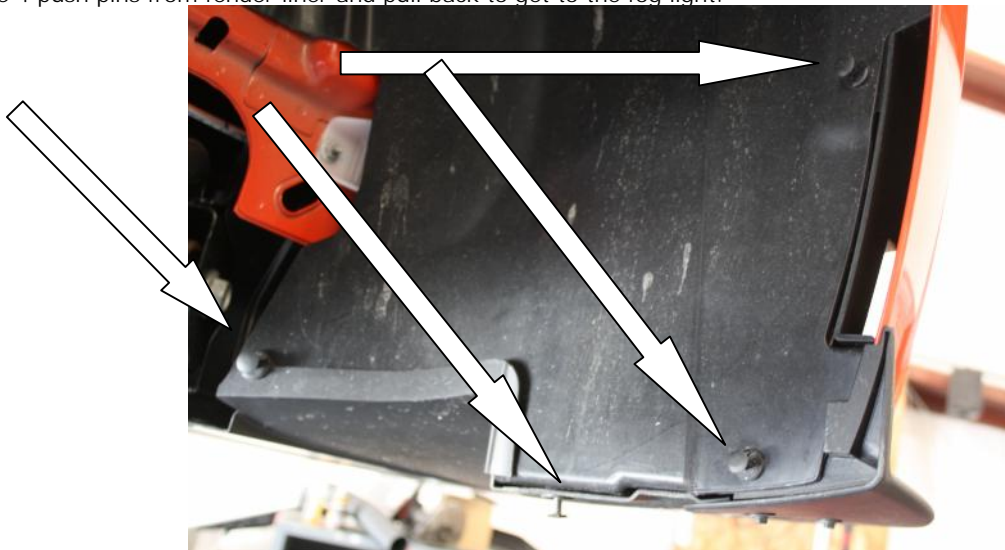

8 Remove the 4 7mm bolts holding on the fog light and bracket.

9 Slide JLT Bezel into fog light hole and push in until it snaps in.

10	<p>Attach one end of the cooling hose to the bezel and other end to JLT backing plates. Route the hose under the control arm and between the frame and sway bar to the backing plate. Use the supplied clamps to secure hose to bezel and plate. to the sway bar with Zip ties as shown.</p> 
11	<p>While still jacked up, be sure to mount wheel and check clearance between hose and tire. Turn the wheel full turns left and right.</p>
12	<p>Reassemble splash shield, brakes and wheels in reverse and you are done. Don't forget to re torque your lug nuts after a few miles of driving. We suggest 100 ft lbs.</p>

Thanks for the business. If you have any questions, please e-mail [Jay@JLTtruecoldair.com](mailto:Jay@JLTtruecoldair.com) or call 757-335-1940. Our hours are Monday-Friday. 8:00am – 5:00pm Eastern Time.

**Warranty:** JLT Performance Inc. will repair or replace any part of their product found upon our inspection to be defective in workmanship or material within 1 year from the purchase date for the original purchaser.

**Disclaimer:** JLT Performance Inc. makes no warranties whatsoever, expressed or implied, oral or written to any purchasers, except the warranty above. JLT Performance Inc. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by JLT Performance Inc. agree to hold harmless and indemnify JLT Performance Inc. from any and all claims arising from their use. Failure to receive notice of any of the limitations contained in this disclaimer shall not serve to extend liability to JLT Performance Inc. for any claims arising out of use of its products.

**Return Policy:** All returns will be subject to a 10%-25% restocking fee. Air Filters will not be accepted for return unless they are in original plastic sealed bag. Please visit [www.JLTtruecoldair.com](http://www.JLTtruecoldair.com) for complete return policy.