

3 Piece Bushing Installation

In order to keep air from getting trapped in the bushing assembly please follow these simple steps.

1. Lubricate using the supplied grease all outer cups and all of the inner balls.
2. Install the center sleeve into the lubricated outer cup and the ball to align the hole.
3. Lubricate the barrel portion of the control arm with the supplied grease.
4. Push the outer cup / ball assembly with the center sleeve into the control arm.
5. Remove the center sleeve from the installed assembly.
6. Install the other lubricated outer cup into the other side of the control arm.
7. Lubricate the center sleeve with the supplied lube and install back into the bushing assembly.
8. Lubricate the face of the bushings along with all metal parts they will come in contact with on the vehicle.



275 Tank Farm Road
San Luis Obispo CA 93401
Office 805-544-1128
Fax 805-543-1664