









## REMOVAL & INSTALLATION INSTRUCTIONS

- 1. Remove all contents from your Mustang's glove box, and press in on the 2 glove box stops far enough to allow the glove box to release downward, and out of the way.
- 2. Now disconnect the plug for your glove box light.
- 3. If you own a '90, or a '91, then you'll need to remove the airbag auxiliary power supply, which is mounted above the glove box. You'll need to disconnect the electrical connection, and remove the 2 T-20 torx screws to release it.
- 4. Gently work the airbag module out of the dash, and set it aside in a safe place.
- 5. You need to remove the three 9mm nuts that retain the dash pad. 2 of them are located above the open part of the glove box, and the other to the left of the center A/C vents. For the last one, you'll need to remove the 2 center vents and the vent surround, by using a small screwdriver against the airflow adjustment wheels, prying them from the surround.
- 6. Now gently pry up on the lock tabs at the bottom of the center vents, working them around in a circular motion. Take your time, and be patient with this step.
- 7. Now pull the vent surround straight out.
- 8. Once the surround is removed, you'll be able to locate the last 9mm nut retaining the left side of the pad.
- 9. Transfer the inner 9mm nut to the back of the new dash pad.
- 10. Reinsert the new dash pad starting with the driver-side first, and then aligning the 2 remaining studs with their holes. Tighten all 3 nuts back down evenly to prevent either side being crooked after tightening.
- 11. Reinsert the vent surround, and the A/C vents back into place, and reconnect all power supplies.
- 12. Push the glove box back into place, and you're all done!

## Disclaime

By using this instruction sheet, you agree that other than as expressly stated in the LMR Terms and Conditions (Agreement) or as required by the laws of the state of Texas or applicable United States federal law (Applicable Law), this instruction sheet is provided "AS IS" and LMR does not make any specific representations or warranties about this instruction sheet. For example, LMR does not make any warranties about: (a) the content provided in this instruction sheet; (b) any specific features of this instruction sheet, or its accuracy, reliability, or ability to meet your needs. The knowledge and experience level of users of this instruction sheet vary widely; if you do not have adequate knowledge and experience to use this instruction sheet and safely accomplish the tasks described, please hire a professional to assist you for your safety and the safety of your vehicle and others.

## Limitation of Liability

Except as required by Applicable Law, LMR, its affiliates, officers, directors, employees and agents will not be responsible for any loss of profits, revenues, business opportunities, goodwill, or anticipated savings, indirect or consequential loss, punitive damages caused by:

- Errors, mistakes, or inaccuracies in this instruction sheet
- Personal injury or property damage resulting from your use of this instruction sheet

This limitation of liability provision applies to any claim regardless of whether the claim asserted is based on warranty, contract, tort or any other legal theory.

Use this information at your own risk, Any injury, damage, or loss that may result from use of the tools, equipment, products, or information contained in this instruction sheet is the sole responsibility of the user.

## Indemnity

To the extent permitted by Applicable Law, you agree to defend, indemnify and hold harmless LMR, its Affiliates, officers, directors, employees, agents, information providers, licensors, and other partners from and against any and all claims, damages, obligations, losses, liabilities, costs or debt, and expenses (including but not limited to attorney's fees) arising from: (i) your use of and access to this instruction sheet; (ii) your violation of any term of the Agreement; (iii) your violation of any third party right, including without limitation any copyright, properly, or privacy right; or (iv) any claim that your actions caused damage to LMR or a third party. The defense and indemnification obligations will survive this Agreement and your use of this instruction sheet.