



LATE MODEL RESTORATION

Prop. 65 Warning for California Residents
WARNING: This product may contain chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.



1983-93 HOOD LATCH & CABLE KIT INSTALLATION GUIDE



LRS-16700K

This kit includes:

Ⓐ Lower Hood Latch



Ⓑ Upper Hood Latch



Ⓒ Hood Release Cable



Ⓓ Lower Latch Bolts



Ⓔ Upper Latch Bolts



Ⓕ Release Cable Bolt



Lower Hood Latch

Removal of the front bumper cover is not required, but is recommended for easier access to the lower hood latch assembly.

1. Open the hood and support it with the prop rod.
2. Loosen and remove the 1/4" screw that secures the hood release cable to the latch (F). If you are replacing the release cable, follow the **Hood Release Cable** installation steps before moving forward.
3. Remove the two 8mm retaining bolts (D) from the lower hood latch.
4. Rotate the latch, and pass the release cable through the hold-down loop.
5. Insert the release cable into the new latch (A), then put it into place.
6. Verify the latch is secure and reinstall the two 8mm bolts (D). Then make sure the cable hold-down loop is in position, and retighten the release cable bolt (F).
7. Close the hood and check the alignment. Readjust as needed until the hood is flush with the front fenders.



WATCH THE INSTALL VIDEO HERE!

Upper Hood Latch

1. Remove the two factory retaining bolts, then remove the old upper hood latch from its mounting location.
2. Put the new latch in place and secure with the provided retaining bolts (E).
3. Close the hood and check fitment, make adjustments as needed until the hood is aligned and secure.

Hood Release Cable

1. Access the lower hood latch assembly, and remove the 1/4" release cable bolt from the lower hood latch, then pass the release cable through the hold-down loop.
2. Under the steering wheel, remove the two mounting bracket bolts holding the hood release handle. Do not discard these bolts.
3. Thread the release cable from the front and bring it through the firewall so it can be removed from under the steering wheel. You may need a tool to unsecure the firewall grommet. Check the Engine Bay photo on Page 2 for reference. (cont.)


FIND YOUR NEXT MOD! SHOP 1000s OF PARTS ONLINE 24/7 @ LMR.COM

1983-93 HOOD LATCH & CABLE KIT INSTALLATION GUIDE


Prop. 65 Warning for California Residents
WARNING: This product may contain chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

4. Thread the new release cable **(B)** through the firewall hole, following the same routing as the factory cable. Ensure the firewall grommet is secured in the firewall hole.
5. Pass the new cable through the hold-down loop on the lower hood latch **(A)**, and secure the 1/4" release cable bolt **(F)** to fully connect it to the latch.
6. Under the steering wheel, put the release handle in place and reattach to the mounting bracket using the same retaining bolts.
7. Pull the handle to check fitment, and make adjustments as necessary to ensure a tight fit.

Lower Hood Latch

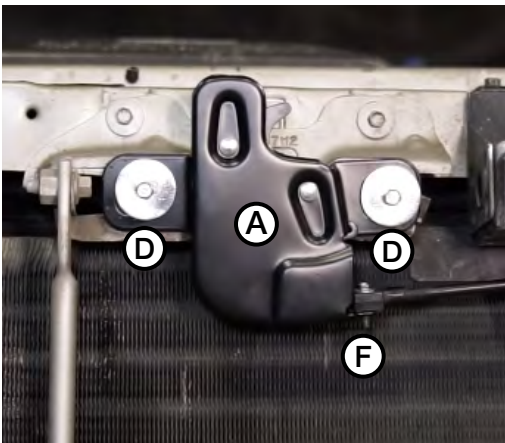


Upper Hood Latch

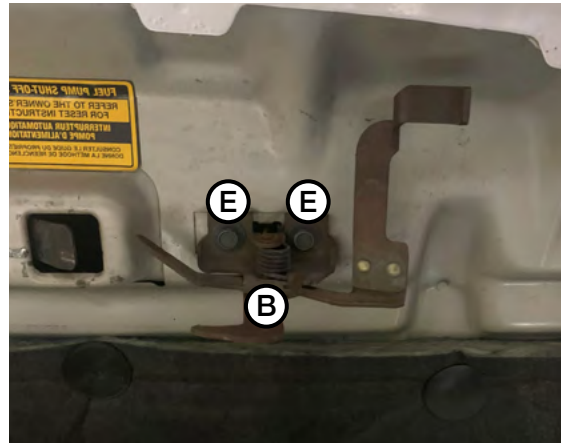

Hood Release Cable (Under Dash)

Bracket bolts will be re-used.

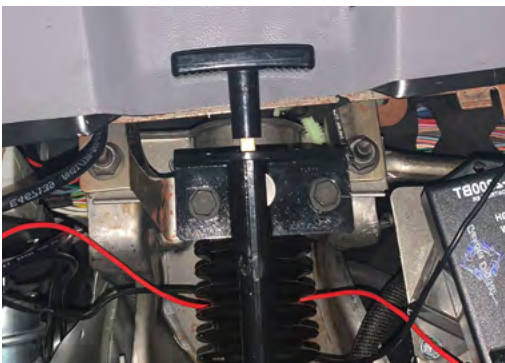

Hood Release Cable (Engine Bay)



Disclaimer

By using this instruction sheet, you agree that other than as expressly stated in the LMR Terms and Conditions (Agreement) or as required by the laws of the state of Texas or applicable United States federal law (Applicable Law), this instruction sheet is provided "AS IS" and LMR does not make any specific representations or warranties about this instruction sheet. For example, LMR does not make any warranties about: (a) the content provided in this instruction sheet; (b) any specific features of this instruction sheet, or its accuracy, reliability, or ability to meet your needs. The knowledge and experience level of users of this instruction sheet vary widely; if you do not have adequate knowledge and experience to use this instruction sheet and safely accomplish the tasks described, please hire a professional to assist you for your safety and the safety of your vehicle and others.

Limitation of Liability

Except as required by Applicable Law, LMR, its affiliates, officers, directors, employees and agents will not be responsible for any loss of profits, revenues, business opportunities, goodwill, or anticipated savings, indirect or consequential loss, punitive damages caused by:

- Errors, mistakes, or inaccuracies in this instruction sheet
- Personal injury or property damage resulting from your use of this instruction sheet

This limitation of liability provision applies to any claim regardless of whether the claim asserted is based on warranty, contract, tort or any other legal theory.

Use this information at your own risk. Any injury, damage, or loss that may result from use of the tools, equipment, products, or information contained in this instruction sheet is the sole responsibility of the user.

Indemnity

To the extent permitted by Applicable Law, you agree to defend, indemnify and hold harmless LMR, its Affiliates, officers, directors, employees, agents, information providers, licensors, and other partners from and against any and all claims, damages, obligations, losses, liabilities, costs or debt, and expenses (including but not limited to attorney's fees) arising from: (i) your use of and access to this instruction sheet; (ii) your violation of any term of the Agreement; (iii) your violation of any third party right, including without limitation any copyright, property, or privacy right; or (iv) any claim that your actions caused damage to LMR or a third party. The defense and indemnification obligations will survive this Agreement and your use of this instruction sheet.