



**1996-04 MUSTANG ADJUSTABLE  
CLUTCH CABLE KIT  
INSTALLATION INSTRUCTIONS**

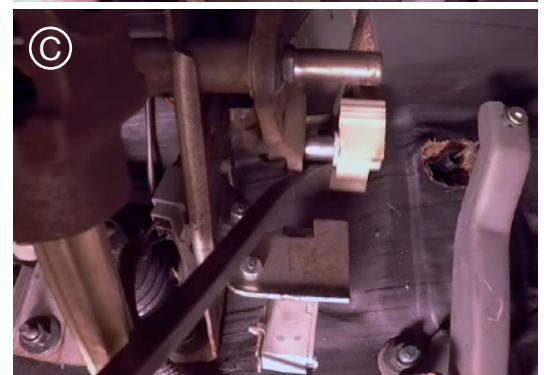

**Instructions**

1. Support the vehicle on a lift or jack stands.
2. Loosen the clutch fork dust cover bolt with a 5/16" socket and remove the cover. Using a pry bar, move the clutch fork forward. **(Figure A)** This will allow you to slip the end of the factory clutch cable out the large hole in the fork.
3. Remove the clutch cable retaining clip then remove the cable from the bellhousing.
4. Locate the clutch cable bracket and remove from the frame rail with a 3/8" socket.
5. Locate the factory plastic quadrant just above the gas pedal. **(Figure B)** Pull the end of the cable over the fangs of the quadrant, then remove the cotter pin from the quadrant shaft. Next, remove the spring and factory quadrant from the shaft.
6. Remove the cotter pin from the self-adjusting gear by flipping the spring over the arm, then slide the gear off the quadrant shaft. **(Figure C)**
7. With your hood open, unbolt the head of the clutch cable from the firewall with a 5/16" socket. Remove the factory clutch cable from the vehicle.
8. Before installing the new clutch cable, file down the four small tabs on the head of the

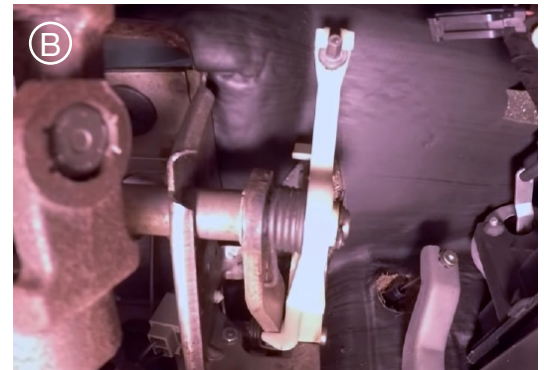

cable and remove the rubber bushing.

9. Next, install the aluminum firewall adjuster using the factory bolt. The firewall adjuster comes with every mounting bolt location for 1996-2004 Mustang applications. **(Figure D)** Then, thread the new clutch cable through the firewall adjuster.

10. Install the billet clutch quadrant on the quadrant shafts, using both factory cotter pins to keep it in place. **(Figure E)** Then, place the clutch cable over the fangs of the quadrant.

11. To prevent the cable from jumping off of the quadrant, we recommend securing it with a rubber band. **(Figure F)**




12. Run the clutch cable through the bellhousing, reinstall the clutch cable retainer clip, then tighten the clutch cable bracket.

13. Run the end of the clutch cable through the clutch fork, and thread the retaining nut until it touches the fork. **(Figure G)**

14. Engage your clutch pedal to test. The clutch should engage when the pedal is about three inches from the floor.

15. Make any needed adjustments, then thread the lock nut against the retaining nut.

16. Reinstall the clutch fork dust cover.

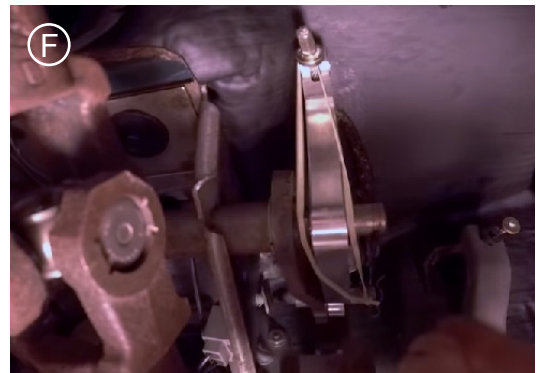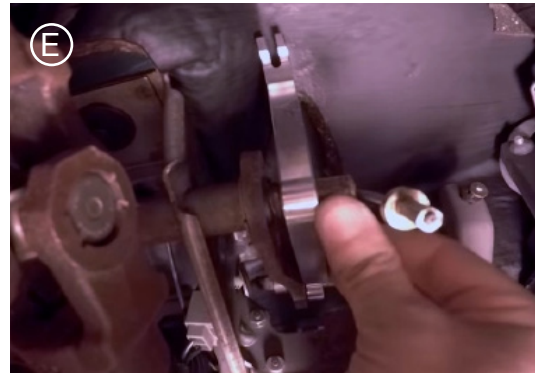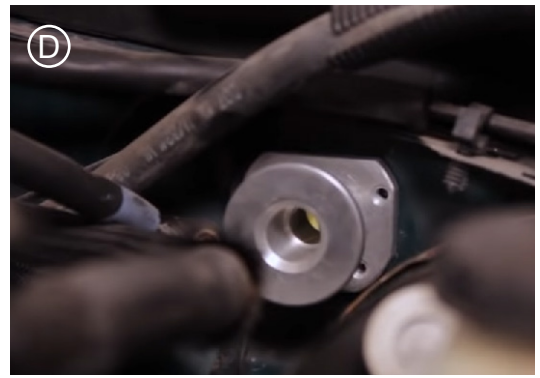

#### Disclaimer

By using this instruction sheet, you agree that other than as expressly stated in the LMR Terms and Conditions (Agreement) or as required by the laws of the state of Texas or applicable United States federal law (Applicable Law), this instruction sheet is provided "AS IS" and LMR does not make any specific representations or warranties about this instruction sheet. For example, LMR does not make any warranties about: (a) the content provided in this instruction sheet; (b) any specific features of this instruction sheet, or its accuracy, reliability, or ability to meet your needs. The knowledge and experience level of users of this instruction sheet vary widely; if you do not have adequate knowledge and experience to use this instruction sheet and safely accomplish the tasks described, please hire a professional to assist you for your safety and the safety of your vehicle and others.

#### Limitation of Liability

Except as required by Applicable Law, LMR, its affiliates, officers, directors, employees and agents will not be responsible for any loss of profits, revenues, business opportunities, goodwill, or anticipated savings, indirect or consequential loss, punitive damages caused by:

- Errors, mistakes, or inaccuracies in this instruction sheet
- Personal injury or property damage resulting from your use of this instruction sheet

This limitation of liability provision applies to any claim regardless of whether the claim asserted is based on warranty, contract, tort or any other legal theory.

Use this information at your own risk. Any injury, damage, or loss that may result from use of the tools, equipment, products, or information contained in this instruction sheet is the sole responsibility of the user.

#### Indemnity

To the extent permitted by Applicable Law, you agree to defend, indemnify and hold harmless LMR, its Affiliates, officers, directors, employees, agents, information providers, licensors, and other partners from and against any and all claims, damages, obligations, losses, liabilities, costs or debt, and expenses (including but not limited to attorney's fees) arising from: (i) your use of and access to this instruction sheet; (ii) your violation of any term of the Agreement; (iii) your violation of any third party right, including without limitation any copyright, property, or privacy right; or (iv) any claim that your actions caused damage to LMR or a third party. The defense and indemnification obligations will survive this Agreement and your use of this instruction sheet.

**FIND YOUR NEXT MOD! SHOP 1000s OF PARTS ONLINE 24/7 @ LMR.COM**