

1979-93 Economy Electric Fan Conversion Guidelines

Every vehicle application is different, this kit is specifically for components included in:
LRS-8005BLEK, LRS-8005AEK

First off, you must have access to a DIGITAL VOLT & OHM METER (DVOM). You cannot use a test light on the diagnosis of this unit. As with any automotive electrical install, make sure your vehicle's battery is in proper operating condition (12.5V or higher). If your battery is weak this can cause functionality issues with the controller unit.

If your fan is not cutting on after install you will need to go over each connection. Check continuity on each connection made. This will involve you using the resistance or ohm setting on the DVOM before and after each connection. If you show an open or OL reading, then you need to fix this connection.

The connectors will need to be cut off the SVE fans, this product does not have extra connectors.

BLUE WIRES FROM FAN - These will go together and will be tied into the loose 3' 12ga Red wire included with the fan controller. It will be connected directly to the Battery Positive terminal. Using the DVOM, verify you show 12.5V or more at the battery when setting this up. Check continuity before and after each connection made.

BLACK WIRES FROM FAN - These will go together and will be connected into the red wire off of the controller. Check continuity before and after each connection made. A 30A Fuse is already added between the negative black wires off the fans and the red wire coming from the fan controller relay.

TEMP PROBE - The most accurate signal for this will be on the thermostat housing. Putting this in any other location can cause issues with the fan cutting on. If your kit did not include part number LRS-8592A then you will need to incorporate this into your installation. LMR recommends to always use this on a vehicle equipped with a thermostat. If your car is running an open thermostat, the coolant may never reach the correct temp depending on conditions.

YELLOW WIRE FROM CONTROLLER - This needs to be hooked up to a valid 12V switched ignition circuit, meaning the circuit is only showing battery voltage when the key is in the on or run position. Using your DVOM, you can go to your fuse panel and find a 12V circuit that is only hot when the key is on. Do not hook this up to any circuits that have a full time 12V source.

BLACK WIRE FROM CONTROLLER - This wire needs to be your ground connection. As with any ground, please make sure the surface is free of any paint or contamination. We recommend going directly to the battery negative terminal. You can also use your DVOM to verify your ground. Hook the red jumper from the DVOM to the positive side of the battery. Then put your black lead on the ground wire connection you have made. You should read battery voltage at this point. Even if you are using an existing ground on the car, it may not be a good one. Always use the DVOM to ensure the ground is adequate.


GREEN WIRE FROM CONTROLLER - This wire is designed to work in 2 different configurations. When this wire is used, this will override the temp probe completely. If you choose not to use this, then make sure it is completely sealed off where it cannot make any connections to a power or a ground.

If you choose to use the override circuit for your A/C, then tap this wire into the positive lead off of the compressor. Using your DVOM, check this connector for battery voltage. Check continuity before and after each connection made if fans do not kick on when the A/C is actuated.

If you choose to use the override circuit for manual switch, attach the green wire to the positive side of the switch. Check continuity before and after each connection made if fans do not kick on when the switch is actuated.

FINAL ADJUSTMENTS OF THE TEMP SETTING- Factory 195° degrees is where you need to set temperature. Lowering fan temp will make fans run continuously. When setting the temp range for the fans, you **MUST HAVE THE CAR TO OPERATING TEMP!** If the engine coolant is cold and not up to temp, then the fan controller will not work. Also, make sure you have checked proper levels of your coolant and that your thermostat is opening when intended. If you have access to a laser style thermometer, point this as close to the temp probe as you can on the housing. Try to get the fans cutting on as close to the thermostat opening point as you can.

FANS SPECIFICATION- This unit will be rated at a maximum capacity of 25 continuous amps. Please make sure to read over your fans specifications and read your amperage rating. If it shows anything higher than the recommended 25 amp rating, then this controller will not work.

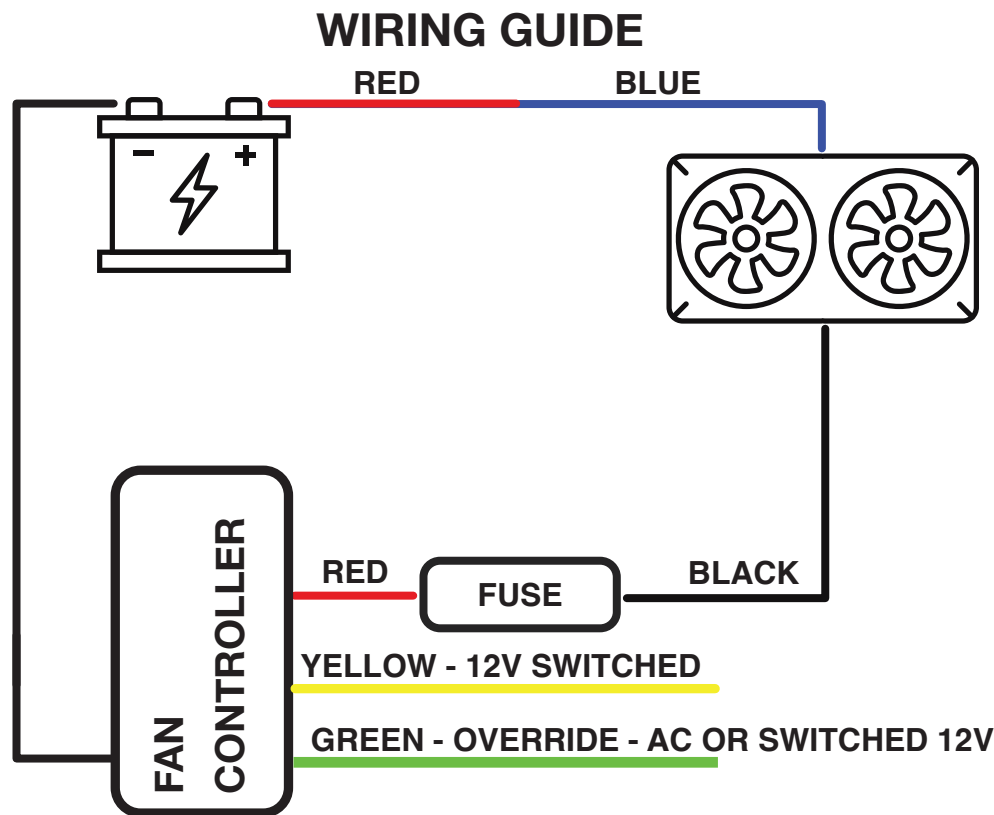

Disclaimer

By using this instruction sheet, you agree that other than as expressly stated in the LMR Terms and Conditions (Agreement) or as required by the laws of the state of Texas or applicable United States federal law (Applicable Law), this instruction sheet is provided "AS IS" and LMR does not make any specific representations or warranties about this instruction sheet. For example, LMR does not make any warranties about: (a) the content provided in this instruction sheet; (b) any specific features of this instruction sheet, or its accuracy, reliability, or ability to meet your needs. The knowledge and experience level of users of this instruction sheet vary widely; if you do not have adequate knowledge and experience to use this instruction sheet and safely accomplish the tasks described, please hire a professional to assist you for your safety and the safety of your vehicle and others.

Limitation of Liability

Except as required by Applicable Law, LMR, its affiliates, officers, directors, employees and agents will not be responsible for any loss of profits, revenues, business opportunities, goodwill, or anticipated savings, indirect or consequential loss, punitive damages caused by:

- Errors, mistakes, or inaccuracies in this instruction sheet
- Personal injury or property damage resulting from your use of this instruction sheet

This limitation of liability provision applies to any claim regardless of whether the claim asserted is based on warranty, contract, tort or any other legal theory.

Use this information at your own risk. Any injury, damage, or loss that may result from use of the tools, equipment, products, or information contained in this instruction sheet is the sole responsibility of the user.

Indemnity

To the extent permitted by Applicable Law, you agree to defend, indemnify and hold harmless LMR, its Affiliates, officers, directors, employees, agents, information providers, licensors, and other partners from and against any and all claims, damages, obligations, losses, liabilities, costs or debt, and expenses (including but not limited to attorney's fees) arising from: (i) your use of and access to this instruction sheet; (ii) your violation of any term of the Agreement; (iii) your violation of any third party right, including without limitation any copyright, property, or privacy right; or (iv) any claim that your actions caused damage to LMR or a third party. The defense and indemnification obligations will survive this Agreement and your use of this instruction sheet.

FIND YOUR NEXT MOD! SHOP 1000s OF PARTS ONLINE 24/7 @ LMR.COM