


1987-88 Extended O2 Sensor Harness - Manual Transmission


COMPLETION OF THE ENCLOSED JUMPER WIRE CIRCUIT IS NECESSARY BY THE USER/INSTALLER OF THIS HARNESS. THE METHOD OF COMPLETION WILL DEPEND ON THE YEAR OF THE VEHICLE AND/OR ENGINE HARNESS. IF YOU HAVE THE OLD HARNESS AND HAVE CONFIRMED IT IS PROPER FOR YOUR APPLICATION, CONNECT THE JUMPER PER THE OLD HARNESS. FAILURE TO COMPLETE THIS CIRCUIT PROPERLY CAN RESULT IN ECM DAMAGE. USE THE FOLLOWING ILLUSTRATIONS FOR MORE DETAIL:




If you have an 87-88 Mustang 5.0 MANUAL TRANS OXYGEN SENSOR HARNESS, it should be pinned like this, it will not use the enclosed black jumper wire. Be sure your new harness is pinned like this:

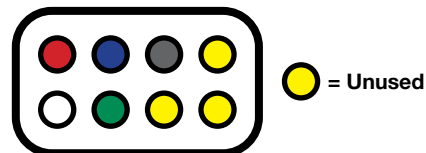

If you have an 89-90 Mustang 5.0 MANUAL TRANS OXYGEN SENSOR HARNESS, it should be pinned like this. Be sure to pin your new harness like this:

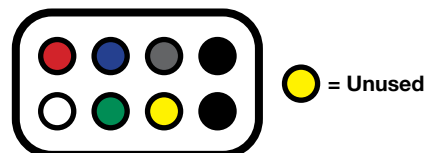

If you have an 91-93 Mustang 5.0 MANUAL TRANS OXYGEN SENSOR HARNESS, it should be pinned like this. Be sure to pin your new harness like this:

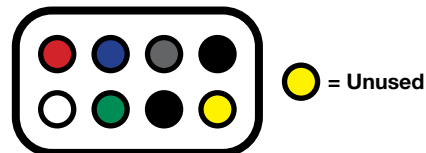


Once you have completed the jumper installation, install the red plastic secondary lock into the face of the connector.

This locks the terminals in place so that they cannot back out of the connector.

Installation

1. Disconnect battery.
2. Safely raise vehicle with jack stands or a lift.
3. Begin removing the existing oxygen sensor harness by disconnecting both oxygen sensor connectors and the oil level connector at the oil pan. Note how the harness is routed. Complete removal of the oxygen sensor harness by disconnecting the round 8-pin connector located on the passenger side fender panel near the mass air flow meter. (cont.)

FIND YOUR NEXT MOD! SHOP 1000s OF PARTS ONLINE 24/7 @ LMR.COM

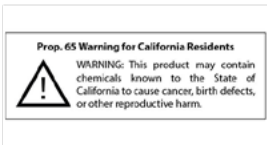

4. Install new oxygen sensor harness by connecting the 8-pin connector and route harness down to the oxygen sensors.
5. Connect the oxygen sensor connectors noting that the shorter leg of harness is the right oxygen sensor (passenger side) and the longer leg of harness is the left oxygen sensor (driver side). Be sure to connect oil level sensor connector.
6. Complete installation by confirming harness is routed away from exhaust and any moving parts.

Disclaimer

By using this instruction sheet, you agree that other than as expressly stated in the LMR Terms and Conditions (Agreement) or as required by the laws of the state of Texas or applicable United States federal law (Applicable Law), this instruction sheet is provided "AS IS" and LMR does not make any specific representations or warranties about this instruction sheet. For example, LMR does not make any warranties about: (a) the content provided in this instruction sheet; (b) any specific features of this instruction sheet, or its accuracy, reliability, or ability to meet your needs. The knowledge and experience level of users of this instruction sheet vary widely; if you do not have adequate knowledge and experience to use this instruction sheet and safely accomplish the tasks described, please hire a professional to assist you for your safety and the safety of your vehicle and others.

Limitation of Liability

Except as required by Applicable Law, LMR, its affiliates, officers, directors, employees and agents will not be responsible for any loss of profits, revenues, business opportunities, goodwill, or anticipated savings, indirect or consequential loss, punitive damages caused by:

- Errors, mistakes, or inaccuracies in this instruction sheet
- Personal injury or property damage resulting from your use of this instruction sheet

This limitation of liability provision applies to any claim regardless of whether the claim asserted is based on warranty, contract, tort or any other legal theory.

Use this information at your own risk. Any injury, damage, or loss that may result from use of the tools, equipment, products, or information contained in this instruction sheet is the sole responsibility of the user.

Indemnity

To the extent permitted by Applicable Law, you agree to defend, indemnify and hold harmless LMR, its Affiliates, officers, directors, employees, agents, information providers, licensors, and other partners from and against any and all claims, damages, obligations, losses, liabilities, costs or debt, and expenses (including but not limited to attorney's fees) arising from: (i) your use of and access to this instruction sheet; (ii) your violation of any term of the Agreement; (iii) your violation of any third party right, including without limitation any copyright, property, or privacy right; or (iv) any claim that your actions caused damage to LMR or a third party. The defense and indemnification obligations will survive this Agreement and your use of this instruction sheet.

FIND YOUR NEXT MOD! SHOP 1000s OF PARTS ONLINE 24/7 @ LMR.COM