

Installation Manual

PART NUMBER FR447



**Read complete instructions
before installation!
Improper installation may
void warranty**

Description: Headlight with Halo


Application: 05-09 Mustang



Tools needed:
10 mm socket
Flat head screw driver
Phillips screwdriver



Remove the 3 push pins on the driver side from the radiator shroud

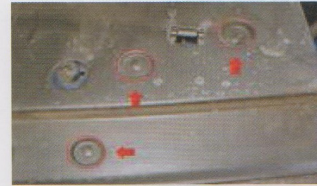

Remove the 3 push pins on the passenger side from the radiator shroud



Remove the radiator shroud



Remove the 3 screws that hold the fender shroud to the bumper. Do this for both the driver side and the passenger side.



Remove the fenders from the vehicle. Be sure to remove the plastic pins holding these to the vehicle.



Twist and remove the driving and turn signal bulb from the bumper light housing. Do this on both sides.



Remove the 10 mm nuts that hold the bumper to the fender. Do this on both sides.



Remove the 10mm screw from the top of the bumper on either side by the headlight. Remove the bumper by pulling straight out.



Remove the 10mm screw located on top of the headlight. Also remove the push pin located in front of the screw.



Remove the two 10mm screws located at the bottom of the headlight housing.




Pull the headlight housing straight out and disconnect the harness from the headlight bulb




Locate the driving light harness



Pull the electrical tape back exposing the wires.

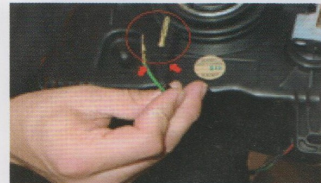

Locate the wires for the Halo on the new headlight assembly.

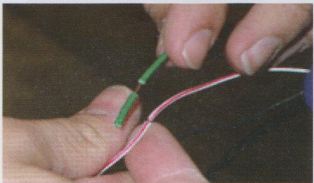

Splice the green wire into the power wire of the driving light.



Splice the black wire into the ground wire from the driving light.



Plug all connections in and reassemble the vehicle. Be sure to Check all functions before operation.