



1993-95 F-150 Lightning 130A Alternator Installation Instructions



Removal

1. Disconnect the negative battery cable.
2. Rotate the belt tensioner and remove the serpentine drive belt from the alternator pulley.
3. Remove the power wire retaining nut **(C)** with a 10mm deep socket, and position the power wire harness away from the alternator.
4. Depress the clip on the harness connected to the stator connection **(B)** and disconnect from the alternator.
5. Remove the two retaining bolts **(A)** from the alternator with a 13mm socket.
6. Remove the alternator.

Installation

1. Position the new alternator into place.
2. Using a 13mm socket, reinstall the two retaining bolts **(A)**.
3. Reconnect the electrical connection **(B)** and power wire **(C)** harnesses, then tighten the nut located on the power wire connection.
4. Rotate the belt tensioner back into place, then reroute the serpentine drive belt. Make sure the belt is routed evenly across the entire accessory drive.
5. Reconnect the negative battery cable.

Be sure to test your new alternator before starting your truck and hitting the road!

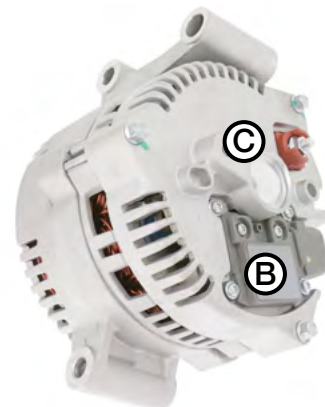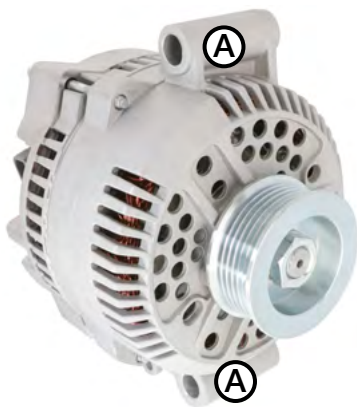

Disclaimer

By using this instruction sheet, you agree that other than as expressly stated in the LMR Terms and Conditions (Agreement) or as required by the laws of the state of Texas or applicable United States federal law (Applicable Law), this instruction sheet is provided "AS IS" and LMR does not make any specific representations or warranties about this instruction sheet. For example, LMR does not make any warranties about: (a) the content provided in this instruction sheet; (b) any specific features of this instruction sheet, or its accuracy, reliability, or ability to meet your needs. The knowledge and experience level of users of this instruction sheet vary widely; if you do not have adequate knowledge and experience to use this instruction sheet and safely accomplish the tasks described, please hire a professional to assist you for your safety and the safety of your vehicle and others.

Limitation of Liability

Except as required by Applicable Law, LMR, its affiliates, officers, directors, employees and agents will not be responsible for any loss of profits, revenues, business opportunities, goodwill, or anticipated savings, indirect or consequential loss, punitive damages caused by:

- Errors, mistakes, or inaccuracies in this instruction sheet
- Personal injury or property damage resulting from your use of this instruction sheet

This limitation of liability provision applies to any claim regardless of whether the claim asserted is based on warranty, contract, tort or any other legal theory.

Use this information at your own risk. Any injury, damage, or loss that may result from use of the tools, equipment, products, or information contained in this instruction sheet is the sole responsibility of the user.

Indemnity

To the extent permitted by Applicable Law, you agree to defend, indemnify and hold harmless LMR, its Affiliates, officers, directors, employees, agents, information providers, licensors, and other partners from and against any and all claims, damages, obligations, losses, liabilities, costs or debt, and expenses (including but not limited to attorney's fees) arising from: (i) your use of and access to this instruction sheet; (ii) your violation of any term of the Agreement; (iii) your violation of any third party right, including without limitation any copyright, property, or privacy right; or (iv) any claim that your actions caused damage to LMR or a third party. The defense and indemnification obligations will survive this Agreement and your use of this instruction sheet.