



Prop. 65 Warning for California Residents WARNING: This product may contain chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

1994-04 MUSTANG BUMP STEER KIT INSTALLATION INSTRUCTIONS



Instructions

1. Support the vehicle on a lift or jack stands.

2. Make the the steering wheel is centered, then measure the distance between the front tires using the same grooves one each tread as a reference point. You will use this measurement later on.

3. Remove the front wheels.

4. Locate the outer tie rod to spindle retaining nut.Remove the cotter pin and loosen the nut with a 19mm deep socket.

5. Use a joint separating tool or strike the side of the spindle to free the tie rod. **(Figure A)**

6. Now measure the distance from the back of the outer tie rod to the center point on the joint. Then measure the same distance on the SVE bump steer collar and rod end. **(Figure B)**

7. Rotate the jam nut according to the difference in distance to accomodate the SVE collar and rod end.

8. Use crescent wrenches to loosen the jam nut. Loosen it enough to turn the outer tie rod, and turn the tie rod counterclockwise to remove it from the inner tie rod. **(Figure C)**

9. Use a tape measure to accurately adjust the jam nut's position on the inner tie rod to match the







FIND YOUR NEXT MOD! SHOP 1

Copyright © 2021 LMR All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means.

previous measurements.

10. Thread the SVE collar onto the inner tie rod until it reaches the jam nut, then tighten with crescent wrenches. **(Figure D)**

11. Install the tapered end of the provided stud up through the spindle.

12. Loosely thread the provided nut, then torque to 40 ft-lbs.

13. Slide the rod end over the stud.

14. Use the provided spacers to properly position the rod end on the stud as close to parallel as possible with the lower control arm. (Figure E)

15. Once the collar and inner tie rod are parallel or close to parallel with the control arm, install the remaining spacers underneath the rod end. (Figure F)

16. Loosely thread the provided lower nut, then torque to 40 ft-lbs.

17. Repeat these steps for the other side.

18. Go for a brief test drive, then take your car to the alignment shop for any minute adjustments.



Disclaimer

By using this instruction sheet, you agree that other than as expressly stated in the LMR Terms and Conditions (Agreement) or as required by the laws of the state of Toxas or applicable United States federal law (Applicable Law), this instruction sheet is provided "AS IS" and LMR does not make any specific representations or warranties about this instruction sheet. For example, LMR does not make any warranties about: (a) the content provided in this instruction sheet; (b) any specific features of this instruction sheet, or its accuracy, reliability, or ability to meet your needs. The knowledge and experience level of users of this instruction sheet vary widely; if you do not have adequate knowledge and experience to use this instruction sheet and safely accomplish the tasks described, please hire a professional to assist you for your safety and the safely for your vehicle and others.

Limitation of Liability

Except as required by Applicable Law, LMR, its affiliates, officers, directors, employees and agents will not be responsible for any loss of profits, revenues, business opportunities, goodwill, or anticipated savings, indirect or consequential loss, punitive damages caused by:

Errors, mistakes, or inaccuracies in this instruction sheet
Personal injury or property damage resulting from your use of this instruction sheet

This limitation of liability provision applies to any claim regardless of whether the claim asserted is based on warranty, contract, tort or any other legal theory.

Use this information at your own risk. Any injury, damage, or loss that may result from use of the tools, equipment, products, or information contained in this instruction sheet is the sole responsibility of the user.

Indemnity

To the extent permitted by Applicable Law, you agree to defend, indemnify and hold harmless LMR, its Affiliates, officers, directors, employees, agents, information providers, licensors, and other partners from and against any and all claims, damages, obligations, losses, liabilities, costs or debt, and expenses (including but not limited to attorney's fees) arising from: (i) your use of and access to this instruction sheet; (ii) your violation of any term of the Agreement; (iii) your violation of any third party right, including without limitation any copyright, property, or privacy right; or (iv) any claim that your actions caused damage to LMR or a third party. The defense and indemnification obligations will survive this Agreement and your use of this instruction sheet.

FIND YOUR NEXT MOD! SHOP 1000s OF PARTS ONLINE 24/7 @ LMR.COM

Copyright © 2021 LMR All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means.