 


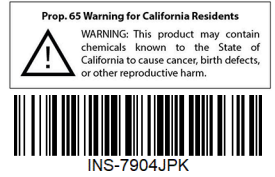

## SVE Mustang Jack Pads Usage Guide



Before using the SVE pinch weld jack pads, please verify that the pinch weld area is straight. If it isn't, use the flange tool to straighten the pinch weld near the factory recommended jacking points. *(Please note: Some pinch welds may need to be repaired by a trustworthy, professional body shop.)*



The flange tool accepts a 3/8-drive socket wrench. There are (2) grooves in the tool which accommodate different thicknesses.

Position the tool over the pinch weld and rotate the socket wrench in the direction you want to move the pinch weld.



The factory recommended jacking points must be used. If needed, the SVE jack pad can be positioned a few inches before or after the factory location. We do **NOT** recommend placing the jack pad at the center of the pinch weld and lifting one side of the vehicle. *(Factory jacking points can be referenced by reviewing the owner's manual that came with the vehicle.) (cont.)*



**WATCH THE INSTALL VIDEO HERE!**

**FIND YOUR NEXT MOD! SHOP 1000s OF PARTS ONLINE 24/7 @ LMR.COM**

When using the jack pads, the jack saddle or lift arm pads must be flat and have an adequate surface area to support the SVE jack pad. (4 jack pads are required if using a vehicle lift.)

Whenever the vehicle has been lifted with a floor jack, support the vehicle with jack stands. Move to the next jacking point and repeat this process until the vehicle is fully supported by jack stands. If you're using a lift, ensure that the lift arms are fully seated on the locks. Do **NOT** crawl under a vehicle until it is properly and safely supported by jack stands or the locks on the lift have been engaged.

## Additional Product Information & Reminders

- SVE does **NOT** recommend placing this jack pad in the center of the pinch weld and lifting one side of the vehicle off the ground as certain year model Mustangs pinch welds are not as strong.
- These are **NOT** intended to stay on the vehicle. They are to be used with a lift or a floor jack and then removed.
- These jack pads were designed to be used with lift arms or a floor jack that incorporates a flat saddle or pad.
- (4) Jack pads must be used if the vehicle is supported by a lift.
- After the jack pads have been used several times, you will begin to see the signs of normal wear and tear.
- If the pinch welds on your Mustang are beyond repair for the flange tool, it is **HIGHLY** recommended to have a trustworthy body shop properly straighten them.
- These jack pads are not recommended for convertible models because of the additional bracing from the factory.
- Because of different side exhaust configurations, exterior side splitters, and any other modifications at or near the pinch weld; there may be accessibility issues for these SVE jack pads.

### Disclaimer

By using this instruction sheet, you agree that other than as expressly stated in the LMR Terms and Conditions (Agreement) or as required by the laws of the state of Texas or applicable United States federal law (Applicable Law), this instruction sheet is provided "AS IS" and LMR does not make any specific representations or warranties about this instruction sheet. For example, LMR does not make any warranties about: (a) the content provided in this instruction sheet; (b) any specific features of this instruction sheet, or its accuracy, reliability, or ability to meet your needs. The knowledge and experience level of users of this instruction sheet vary widely; if you do not have adequate knowledge and experience to use this instruction sheet and safely accomplish the tasks described, please hire a professional to assist you for your safety and the safety of your vehicle and others.

### Limitation of Liability

Except as required by Applicable Law, LMR, its affiliates, officers, directors, employees and agents will not be responsible for any loss of profits, revenues, business opportunities, goodwill, or anticipated savings, indirect or consequential loss, punitive damages caused by:

- Errors, mistakes, or inaccuracies in this instruction sheet
- Personal injury or property damage resulting from your use of this instruction sheet

This limitation of liability provision applies to any claim regardless of whether the claim asserted is based on warranty, contract, tort or any other legal theory.

Use this information at your own risk. Any injury, damage, or loss that may result from use of the tools, equipment, products, or information contained in this instruction sheet is the sole responsibility of the user.

### Indemnity

To the extent permitted by Applicable Law, you agree to defend, indemnify and hold harmless LMR, its Affiliates, officers, directors, employees, agents, information providers, licensors, and other partners from and against any and all claims, damages, obligations, losses, liabilities, costs or debt, and expenses (including but not limited to attorney's fees) arising from: (i) your use of and access to this instruction sheet; (ii) your violation of any term of the Agreement; (iii) your violation of any third party right, including without limitation any copyright, property, or privacy right; or (iv) any claim that your actions caused damage to LMR or a third party. The defense and indemnification obligations will survive this Agreement and your use of this instruction sheet.