



**LRS-7553**  
**1982-04 Mustang Adjustable Clutch Cable Kit**  
**Instruction Sheet**



1. Disconnect the battery.
2. Lift and secure the vehicle with jack or lift.
3. First, locate the point where the stock cable attaches to the bell housing. Manually depress the clutch fork by prying it toward the front of the vehicle to release the cable from the fork.
4. Remove cable housing clip from the bellhousing then pull the cable through.
5. In front of the left hand shock tower is the mounting bracket for the cable, remove the attaching screw.
6. Located on the firewall is the point from which the cable enters the passenger compartment. Remove the retaining screw.
7. Underneath the dash on the driver's side, you will find the cable entering through the firewall and attaching to the stock quadrant. Remove the cable from its point of contact with the plastic quad.
8. Remove the plastic quadrant spring and clips from both the quadrant and the self adjusting lever. Press the clutch pedal toward the firewall and remove the plastic parts from the pedal assembly and install the new billet quadrant provided using the original clip and plastic washer.
9. Remove the stock cable and insert the new adjustable cable routing it in the original location. Re-attach the mounting bracket at the firewall as well as in front of the shock tower.
10. Re-install the cable into the bellhousing. Put the retaining clip back on the cable where it attaches to the bellhousing.
11. Pull the rubber bushing off of the end of the clutch cable where the cable meets the firewall. File the 4 small bumps off of the end of the clutch cable (adjustable cables and 1982-93 stock cables only). Insert the clutch into the cable adjuster.
12. Attach the opposite end of the cable back to the new billet quadrant.

**LMR.COM**

© 2004 Latemodel Restoration Supply, Inc. All Rights Reserved.



**LRS-7553**  
**1982-04 Mustang Adjustable Clutch Cable Kit**  
**Instruction Sheet**

13. Attach the cable to the clutch fork and adjust leaving approx. 1/4" for play in the clutch pedal.
14. Tighten the jam nut on the cable to secure the adjustment made.
15. Periodic adjustments must be made as the clutch disc wears over time.
16. Re-connect the battery and remove the car from lift or jack. Go have fun!

**LMR.COM**

© 2004 Latemodel Restoration Supply, Inc. All Rights Reserved.