


Part # 3001: 1986-04 Mustang, All V8

Except 03-04 Cobra and 87-93 GT

Part # 3002: 1987-93 Mustang GT

Cat-Back System

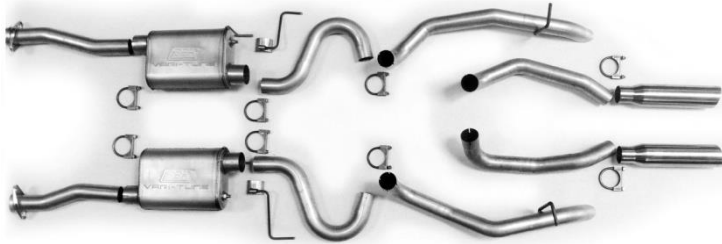

Special Tools Required:

- Sawz-All

Install Time:

Approximately
1 hour and 30 mins

Difficulty:

3 out of 5

Follow these instructions carefully to ensure correct fitment and operation.

STEP 1

- Lift the vehicle and support using jack stands.

STEP 2

- To aid in removal of the stock exhaust system a sawz-all is required.


STEP 3

- Remove the bolts connecting the exhaust pipes and cut somewhere between the axle and the back of the muffler.

STEP 4

- View the picture on page 3 to see how all the tubing will be fitted and lined up for installation.

STEP 5

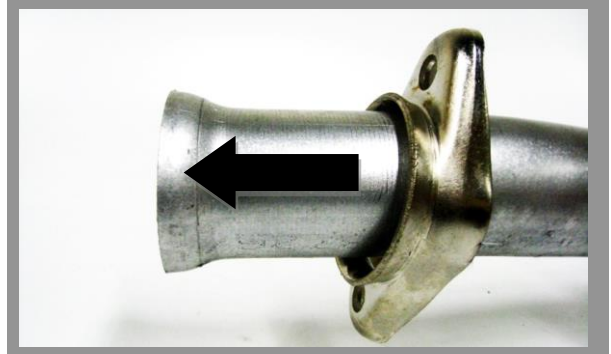

- Slide the flared flanges over the head pipes so that the flared end of the flanges match the flared end of the head pipes as shown.

STEP 6

- Place the head pipes into the correct location and snug the bolts enough for some adjusting room. Slide the 2 3/4" clamp over the muffler inlet and slide the muffler over the head pipe then snug the clamp down.



Join our Facebook page
www.facebook.com/bbkperformance



Follow us on Twitter
[@bbkperformance](https://twitter.com/bbkperformance)



Check us out on Youtube
www.youtube.com/bbkperformance

GO TO NEXT PAGE

WWW.BBKPERFORMANCE.COM

For any questions, email us:
tech@bbkperformance.com

installation instructions

1


Part # 3001: 1986-04 Mustang, All V8

Except 03-04 Cobra and 87-93 GT

Part # 3002: 1987-93 Mustang GT

Cat-Back System

STEP 7

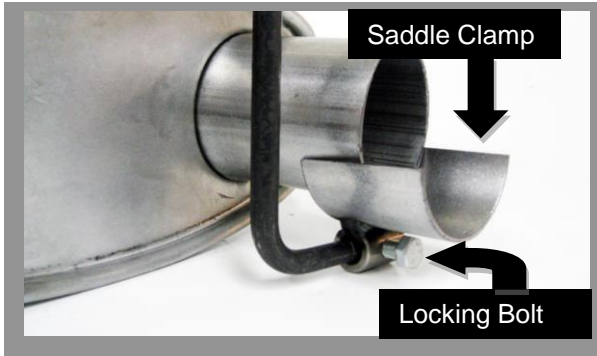

- Use the hanger and saddle clamp for the outlet of the muffler. Slide the hanger through the corresponding rubber grommet on the chassis then snug the hanger into the saddle clamp and tighten the locking bolt to hold the hanger in place.

STEP 8

- Slide the over axle tube into the muffler then snug the saddle clamp. Slide the 2 3/4" clamp at the end of the over axle tube.

STEP 9

- Slide the hanger on the exit tube into the correct rubber grommet, then slide the tube over the over axle pipe. Snug the clamp. **NOTE: THE 87-93 GT HAS WELDED HANGERS ON THE EXIT PIPES.**

STEP 10

- For passenger side installation repeat steps 4-8.

STEP 10

- Make final adjustments and tighten the axle back system starting from the front.



Join our Facebook page
www.facebook.com/bbkperformance



Follow us on Twitter
 @bbkperformance



Check us out on Youtube
www.youtube.com/bbkperformance

GO TO NEXT PAGE

WWW.BBKPERFORMANCE.COM

For any questions, email us:
tech@bbkperformance.com


installation instructions

2



Part # 3001: 1986-04 Mustang, All V8
Except 03-04 Cobra and 87-93 GT
Part # 3002: 1987-93 Mustang GT
Cat-Back System

Fitment for Installation

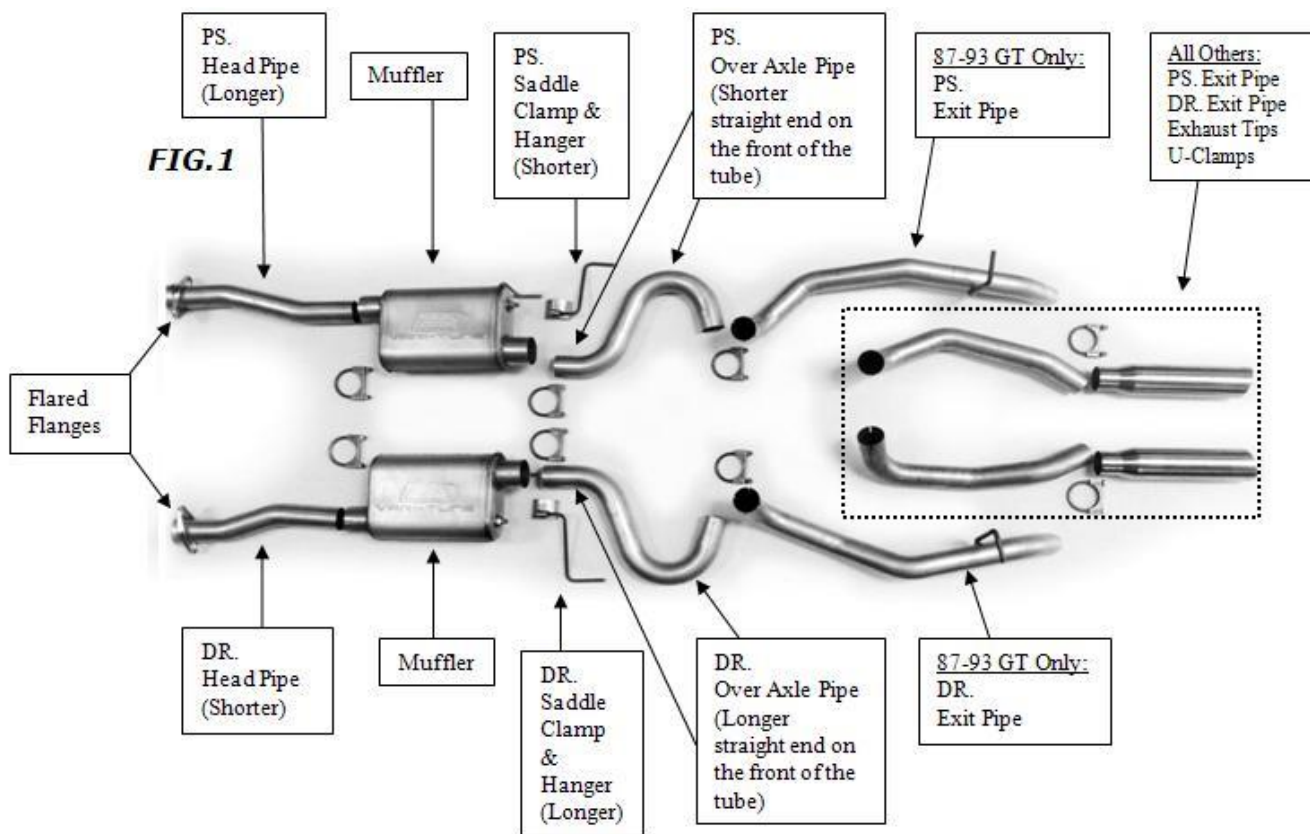

Revised 2/25/2013

Join our Facebook page
www.facebook.com/bbkperformance

Follow us on Twitter
[@bbkperformance](https://twitter.com/bbkperformance)

Check us out on Youtube
www.youtube.com/bbkperformance

WWW.BBKPERFORMANCE.COM

For any questions, email us:
tech@bbkperformance.com

installation instructions

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance Inc. accepts no responsibility for injuries or damage caused by or during the installation of this product.