



2015-16 Mustang Sequential Signal Mirrors

CDC# 1511-7053-01 – “Objects in Mirror are closer than they appear”

CDC# 1511-7053-01a – “Objects in Mirror are Losing”

Vehicle MUST have amber turn signal in mirror housing for a “plug and play” installation.

NOT compatible in vehicles equipped with blind spot monitoring system.

Note: READ instructions before starting installation!!!



Components:

- Driver side Mirror
- Passenger side Mirror
- Driver side wire Harness
- Passenger side wire Harness

Required Tools:

- Large Flat Screwdriver
- Small flat head Screwdriver
- Pliers
- T-15 torx bit

CD4II3DP

Installation Instructions:



1. Adjust mirror to gain access for Screwdriver. Insert Screwdriver behind mirror, gently twist blade of screwdriver until all of the attachment points release.



2. Remove the heater wires with a pair of pliers. Set mirror aside.



3. Remove the (2) T-15 screws that secure the outer ring to the mirror housing. Use small Screwdriver to release clips, and remove outer ring.

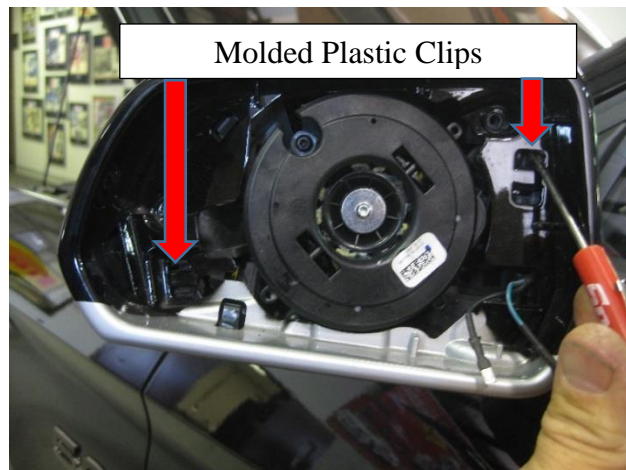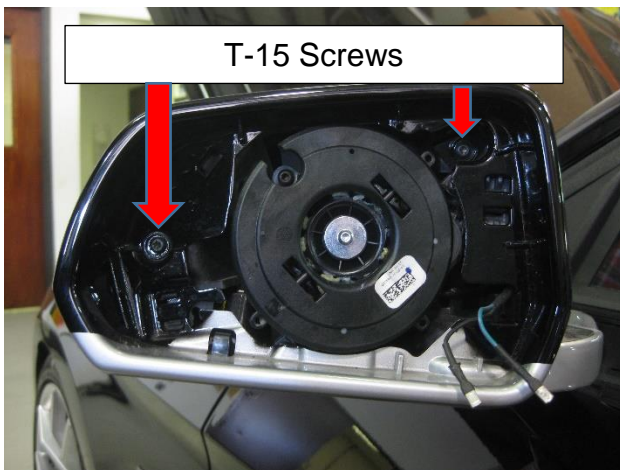


CD4II3DP


4. Remove outer ring and set aside.



5. Remove the (3) T-15 Torx screws that secure the power adjuster to the mirror housing.

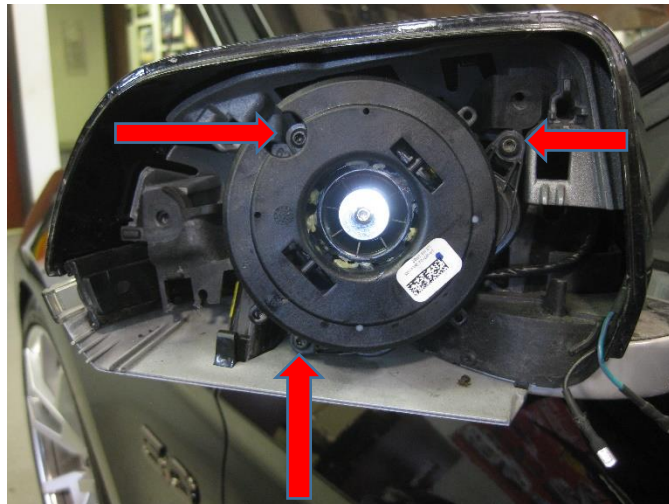


6. Disconnect connector as shown below, and set adjuster aside.

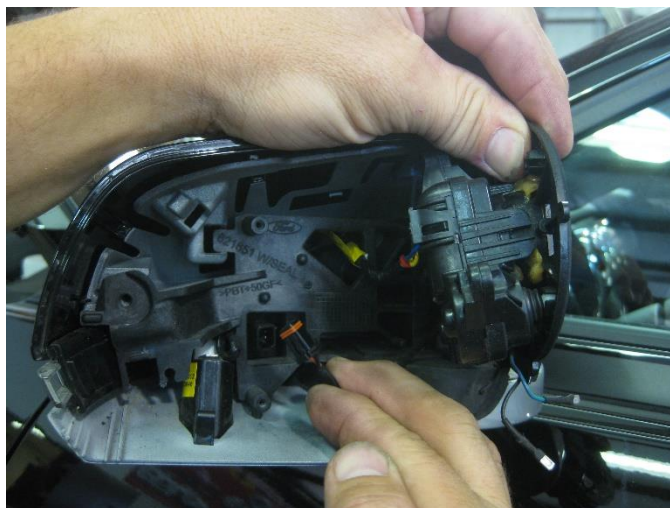


CD4II3DP

7. Install the provided wire harness as shown.

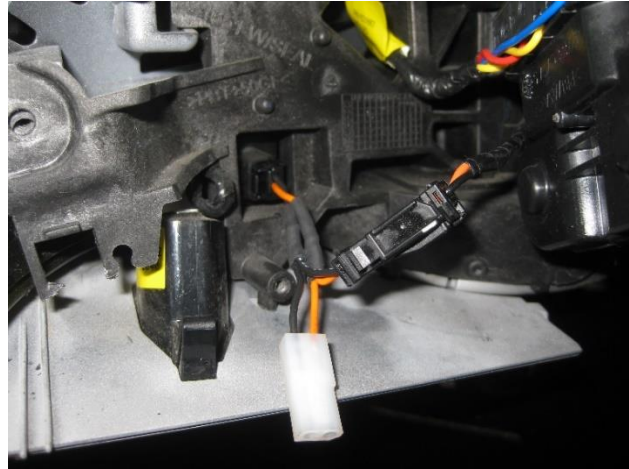

8. Reinstall the adjuster.

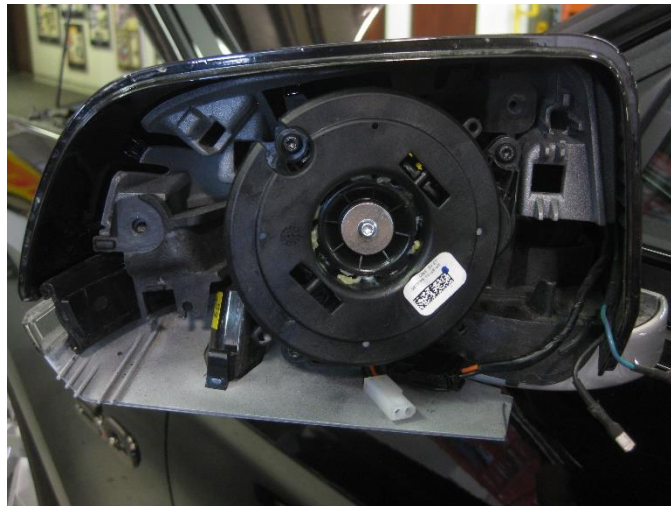


9. Reinstall outer ring with screws previously removed. Plug in Signal Mirror at this time.



CD4II3DP

10. Connect heater wires to mirror. Route Signal wires as shown, below adjuster.

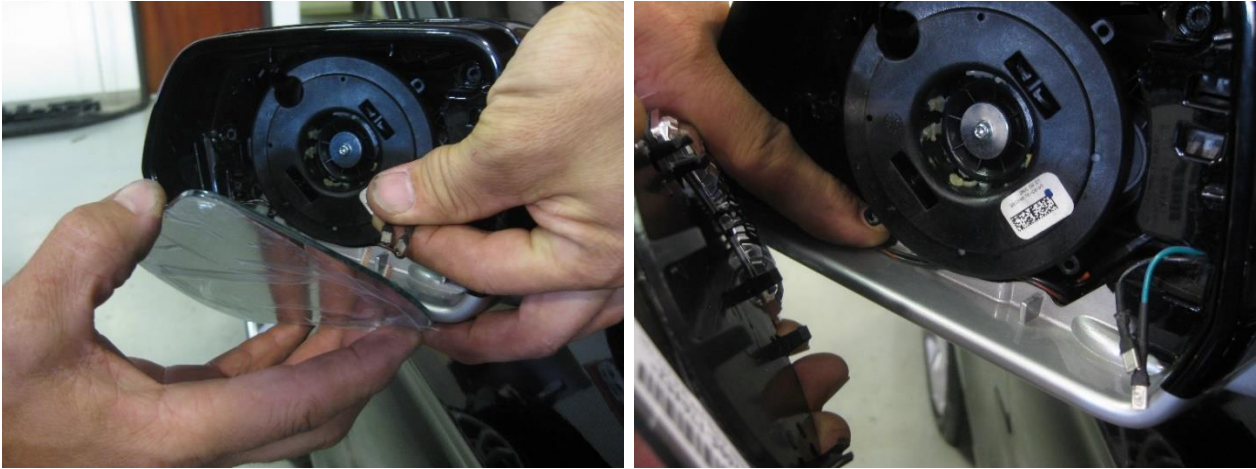

11. Align plastic retainers to adjuster, and gently push until all the fasteners engage.



12. Repeat installation process on opposite side of vehicle.



Thank you for choosing Classic Design Concepts for your restyling needs. If you have any questions or concerns regarding installation, please contact Tech@CDCdetroit.com or call 866-624-7997.