



INSTALLATION INSTRUCTIONS

**BRAKE BOOSTER COVER
P/N: 74253, MUSTANG 79-93**

This kit has been specifically designed to fit the 79-93 Ford Mustang brake reservoir cover. It includes all the necessary hardware to secure it in place. The cover supplied is raw aluminum. It can be polished, anodized or powder coated.

PARTS LIST			
DESCRIPTION	QTY	DESCRIPTION	QTY
COVER	1	HOOK DOTS	3
FOAM STRIP	.5FT	LOOP DOTS	3



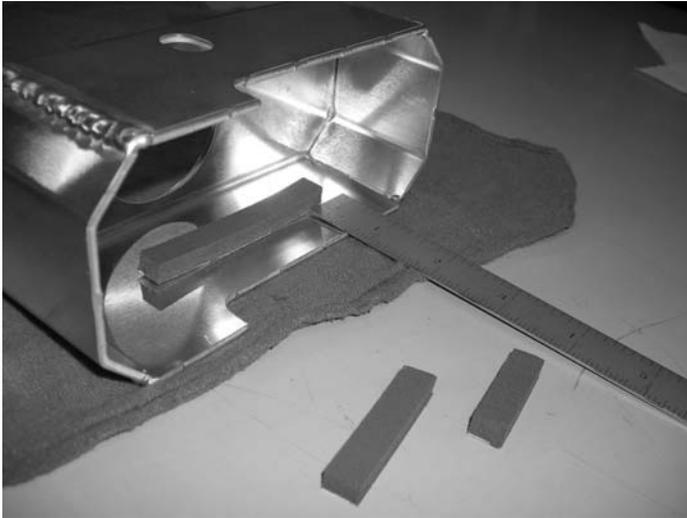


Figure 2

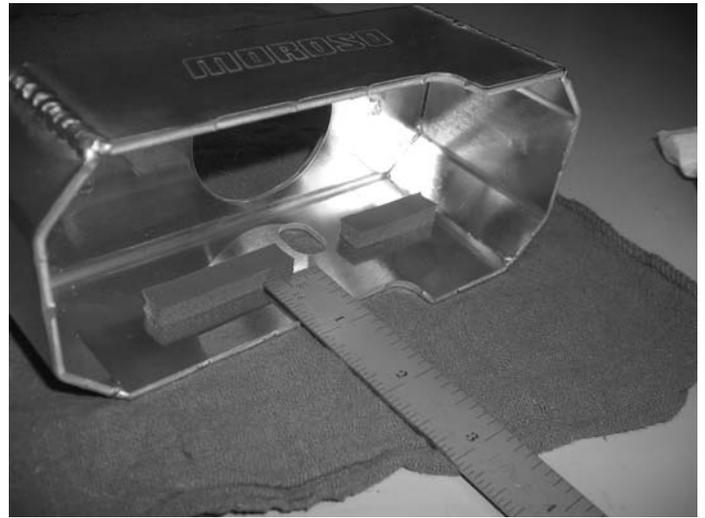


Figure 3

PREPARING COVER (Figure 2 and Figure 3)

1. Cut foam strip into three pieces: 3", 1-1/4" and 1-3/4" long.
2. Protect cover from being scratched and rest it on a work surface.
3. Clean inside of cover with rubbing alcohol.
4. Position the cover so that the fill level sight of the cover is facing up.
5. Position and stick the 3" long foam strip 3/4" from the long edge and center front to rear of cover. Press and hold for 30 seconds.
6. Position cover so that the MOROSO logo is facing up.
7. Position and stick the 1-1/4" long foam strip 1-1/4" from the short edge and 1/4" from the fill level sight. Press and hold for 30 seconds.
8. Position and stick the 1-3/4" long foam strip 3/4" from the long edge and 1/4" from the fill level sight. Press and hold for 30 seconds.



Figure 4



Figure 5

INSTALLING COVER

1. Degrease and clean top of master cylinder taking care to not contaminate the fluid.
2. Peel and stick three hook dots as shown in Figure 4.
3. Without peeling the backing, align and mate the loop dots to the hook dots shown in Figure 5.
4. Peel the backing off of the mated loop dots.

INSTALLING COVER (cont'd)

5. Remove brake reservoir cap and carefully install cover. Do not allow foam to curl over or become unattached.
6. Press and hold the cover in place for 30 seconds.
7. Install cap and do not remove cover for two days.
8. Be sure that the wires for the brake fluid sensor are safely routed away from the cover so that they do not become chafed or cut.

CAUTION: NEVER REMOVE COVER WHEN THE ENGINE IS HOT TO PREVENT THE POSSIBILITY OF REMOVING THE DOTS AND FOAM.



This vehicle also had installed:
74254: Coil Cover
85514: Air-Oil Separator

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, (203) 458-0546 8:30am–5:00pm EST**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437-2116
Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com