




Front & Rear Quarter Paint Protection Installation Instructions – USING “SLIP” Rev. 12/03/2017

WHAT'S INCLUDED:


- 1 & 2 Passenger Rear Wheel Quarter Panels
- 3 & 4 Driver Rear Wheel Quarter Panels
- 5 & 6 Driver and Passenger Front Quarter Panels
- 7 & 8 *Optional* Driver and Passenger Extra Pieces

TOOLS REQUIRED:

- Squeegee (Yellow SuperFlex Preferred)
- SLIP (Formula Below)
- Microfiber Towel
- Heat Gun/Blow Dryer (Recommended but is optional)
- Gloves

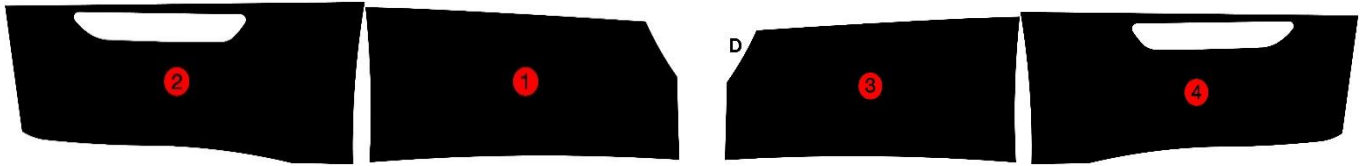

PIECES SHOWN ARE NOT TRUE TO SIZE

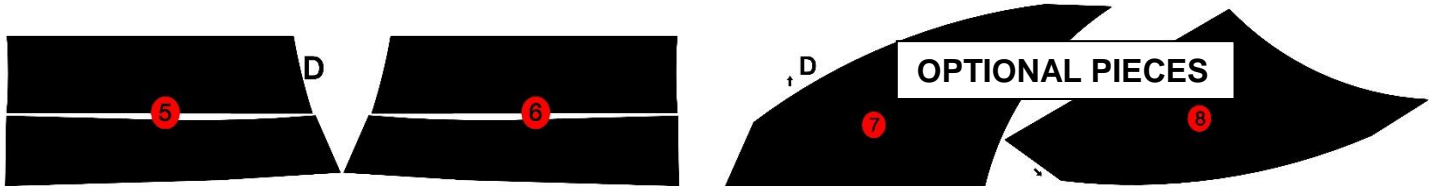

SLIP formula: 8oz Isopropyl Alcohol, 8oz Distilled Water, 1ml Baby Shampoo

INSTALLATION INSTRUCTIONS:

- Clean installation surface prior to starting to ensure it is free from any debris and perfectly smooth – on an older paint surface you may want to consider using a clay bar to ensure the surface is perfect for installation. Common imperfections are due to tar or bugs. If chemicals are used in order to clean surface, ensure that you clean surface with soap to remove any chemical residue. **>> Install only in an environment of 70* or warmer <<**
- Using disposable rubber gloves at this point is recommended. Spray the surface (where you are applying the Paint & Lens Protection Film) heavily with “SLIP” (see formula above).
 - Spray “SLIP” on your fingers before handling adhesive side of film.
 - Gently remove the film from the backing paper and spray film with “SLIP” on the adhesive side.
 - Spray outside film surface with “SLIP” (this aids in smooth gliding of the squeegee during installation).
 - Place film on the surface.
 - Once you find perfect placement, using a squeegee start removing “SLIP” from the underside of the film.
 - **IMPORTANT NOTE:** Body panels 1, 3, 5 & 6 have a lot of curvature which will create a bow to the film when initially placed. Pieces 5 & 6 require the left and right sides to be placed first (including the removal of the slip from behind the film with the squeegee – this will hold them in place) and then the center worked down with the squeegee. Pieces 1 & 3 require left to right alignment and using the same method as above work your way down with the squeegee. A heat gun to heat the bow on these pieces may help to get the material to lay down. This may take a few swipes depending on temperature during installation.
- Finish off by wiping material down with the microfiber towel to clean up.
- If you have extra material that may hang a little bit over the edges, use a heat gun or hair dryer to help material wrap around the edges.
- *We suggest the use of “SLIP” instead of application fluid or other chemicals in order to reduce the clouding effect some chemicals may have on the Paint and Lens Protection Film.*



PLEASE WATCH OUR INSTALLATION VIDEO IT SHOWS EXACTLY HOW TO INSTALL THE FILM

car550.com/15fm-pp-frq