



Steeda S550 Mustang Bumpstop Kit

Installation Instructions for Part: 555-4445



For Stock Ride Height Vehicles and Steeda Springs 555-8208, 555-8209, 555-8210, and 555-8212:

FRONT

REAR



USE BOTH THE BASE AND SECONDARY BUMPSTOPS ON THE FRONT AND REAR




For Lowered Ride Height Vehicles and Steeda Springs 555-8211, 555-8213, 555-8214, and 555-8222:

FRONT

REAR



USE ONLY THE BASE BUMPSTOP ON THE FRONT AND REAR

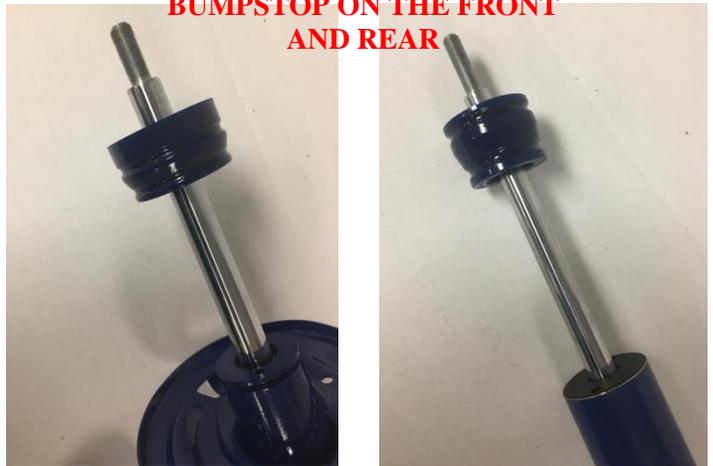

Use the provided o-rings on the REAR shocks below the bumpstops for lowered applications