

2015+ Ford Mustang GTC-200 Wing Installation Manual

Components List:


- 1 x Airfoil
- 2 x Mustang GTC-200 Pedestals (upper and lower)
- 2 x L-Shaped Aluminum Base Plate
- 2 x L-Shaped Base Plate Gasket
- 2 x Mustang Side plate
- 2 x M6 x 30mm stud (for base plate)
- 10 x M6 x 25mm Bolt
- 4 x M6 x 20mm Bolt
- 6 x M6 Nylon Nut
- 8 x M6 Washer
- 4 x M6 APR Side Plate Bolt (for side plates)
- 2 x Allen Wrenches 3,4

Installation Time: 1 hour







1. Put masking tape at the edge of the trunk.

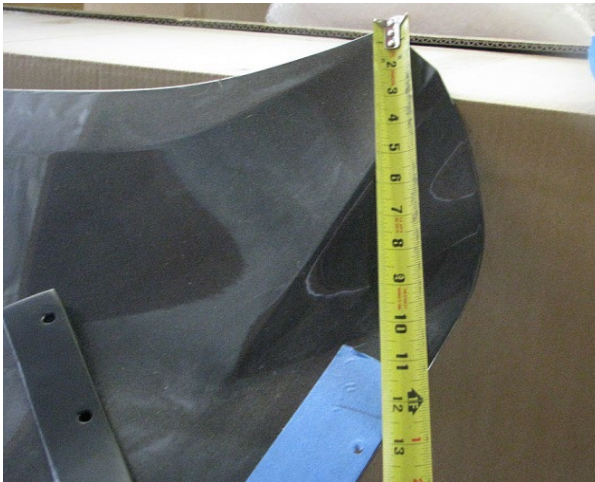


2. Use measurement tape, measure 12.5" from the front tip of the trunk to side edge of the trunk, mark a line there. See photo.

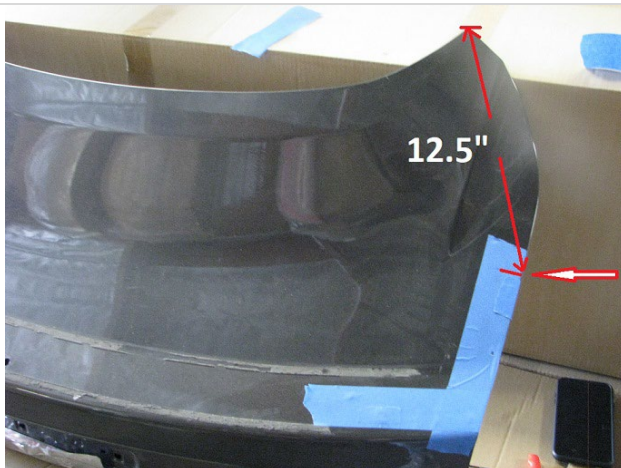


3. Here is the right side trunk measurement. 12.5" from the top. Repeat steps to other side.

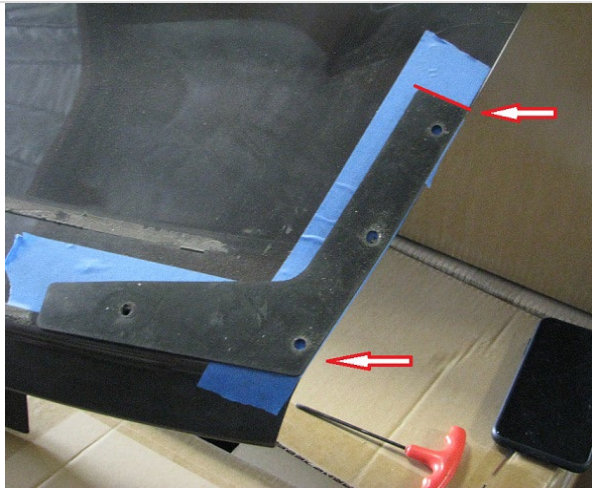

4. Place rubber gasket on the trunk with the top edge lining up with the mark line.
5. Make sure the side edge also aligned with edge of the trunk.

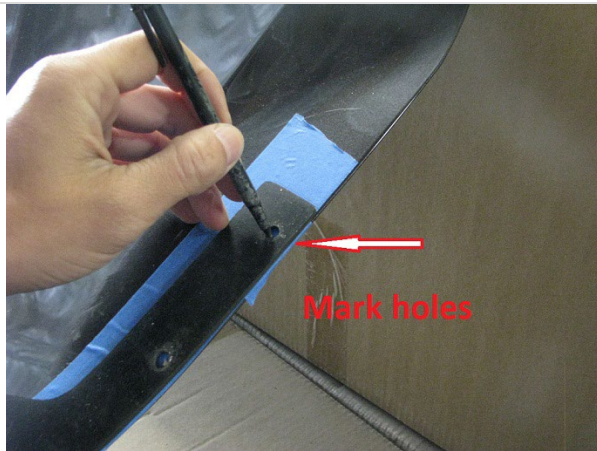

6. Proceed mark pre-drilled holes on the gasket to the trunk. Repeat steps to other side.

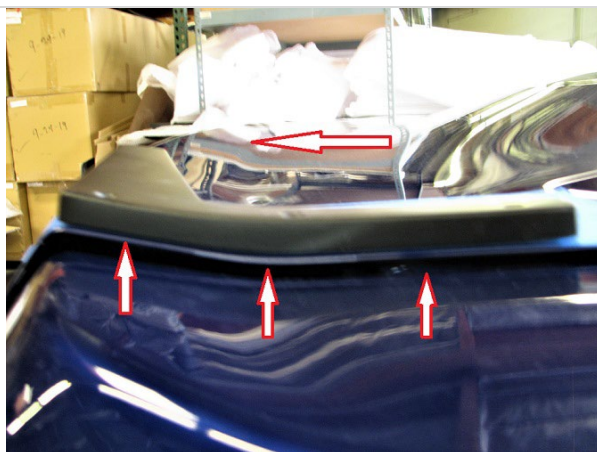

7. After holes are marked, now you can use the billet base plate to check the hole alignment.




8. Once the hole locations are confirmed, use 1/4" drill bit to make all the holes.



9. Insert M6 x 30mm stud to the base plate, and then the rubber gasket after.




10. Gasket installed to the base plate

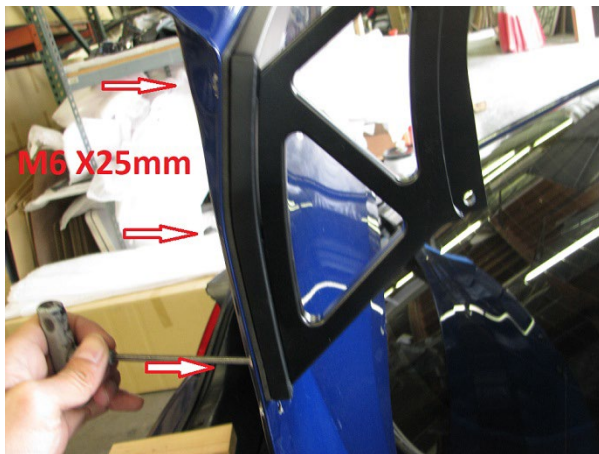


11. Place base plate to trunk and use M6 nut and washer for the stud on the back side of the base plate. Use M6 x 25mm bolt with washer to secure the pedestal. Choose the pedestal with notched top portion facing edge of the trunk. Repeat steps to other side.

Note: Do not tighten all the bolts and nuts on the pedestal during this time. You do this last when upper foil is lock down to the pedestals.

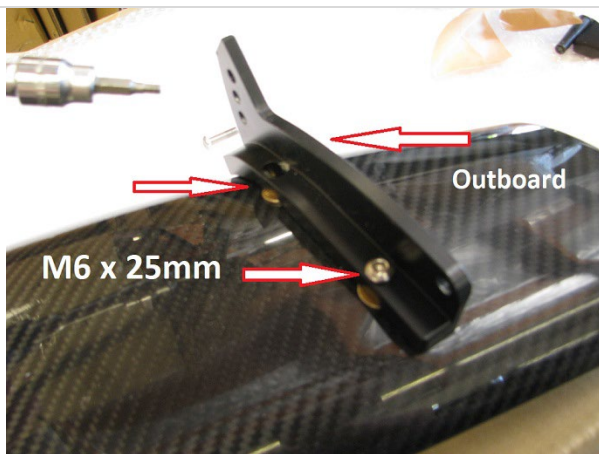

12. Install under brackets to the wing foil. Use M6 x 25mm bolts to secure both brackets.

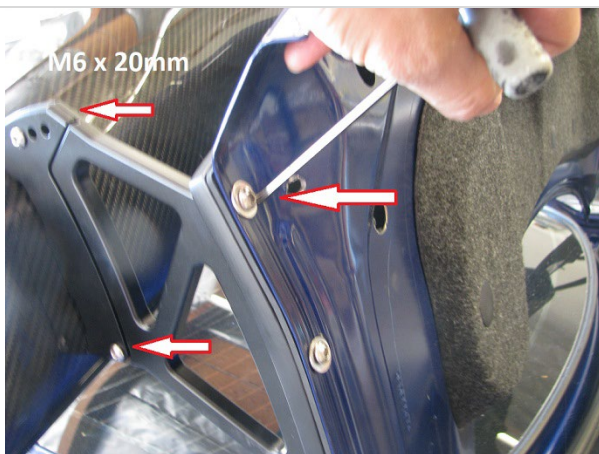

13. Place the complete upper foil with brackets to both pedestals. Use M6 x 20mm and nut insert to secure it.
14. Now you can tighten all the M6 bolts on the bottom side of the trunk.



15. Tighten 10mm nut insert also.



16. Install side plates with APR logo on trailing edge side of the wing.

Installation now is complete.