



2024 Ford S650 Mustang Hood Vent Installation

Components List:

- 1 x Carbon Hood Scoop
- Thin foam strip (Pre-attached)

Approximate Installation Time:


30-45 mins



Installation Procedures:




1. Open front hood. Look for 4 x 10mm nuts holding the vent. Remove all the nuts off.

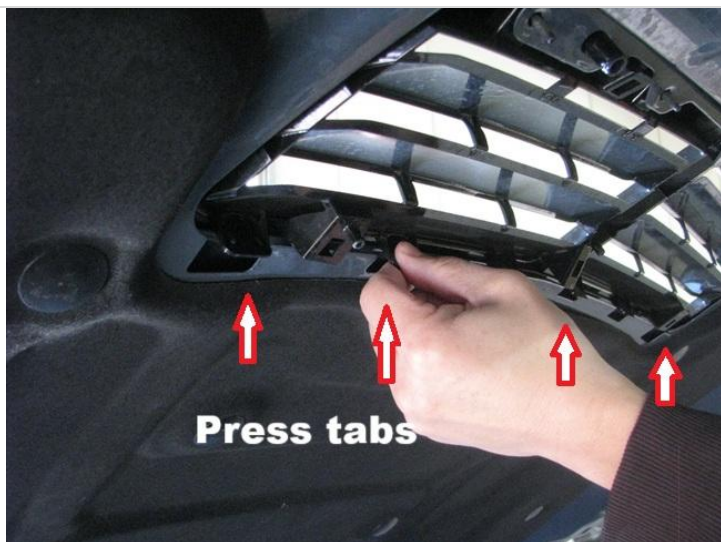

2. Next, press and release the tabs on the back side of the vent.



3. Lift and remove the OEM vent from the top side.

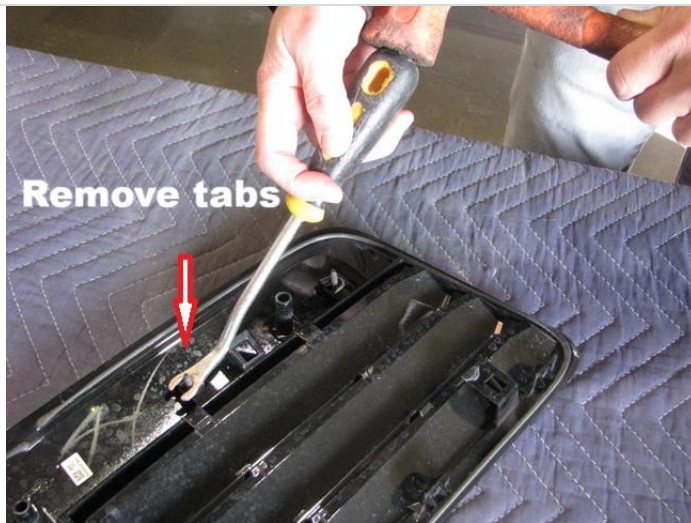

4. Remove all factory fastener attachments off the vent and transfer them over to the new carbon fiber vent.



5. Reinstall Factory fasteners to the carbon fiber vent.
6. Place the carbon vent to the hood and use all 10mm nuts to fully secure it.

Now the installation is complete