




INSTALLATION INSTRUCTIONS

2011-2014 Ford Mustang V6

Tuned Length Headers

Part # 1442, 14420

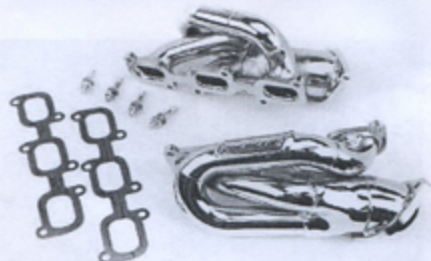

Special Tools Required:

- No special tools required

Install Time:

Approximately 1 Hour

Difficulty:


3 out of 5

Follow these instructions carefully to ensure correct fitment and operation.

STEP 1

- Disconnect the negative battery terminal, then raise and support the vehicle using jack stands or a car stand.


STEP 2

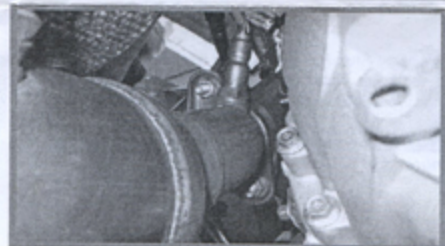

- Unbolt the factory x-pipe from the exhaust manifolds and let it hang down. This will aid in tightening the passenger side BBK Header.

STEP 3

There are 3 nuts on the top and bottom of both driver side and passenger side exhaust manifolds.

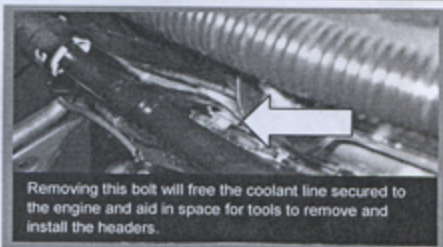

Removing this bolt will free the coolant line secured to the engine and aid in space for tools to remove and install the headers.

- Remove the heat shields on the exhaust manifolds. Remove the 6 nuts securing each exhaust manifold to the cylinder head. Remove the Header and Gasket from the vehicle.
NOTE!!! These manifolds can be removed from the top of the engine compartment.



INSTALLATION INSTRUCTIONS

2011-2014 Ford Mustang V6

Tuned Length Headers



Part # 1442, 14420

STEP 4




- Install the supplied studs onto the BBK Header Collectors.

STEP 5

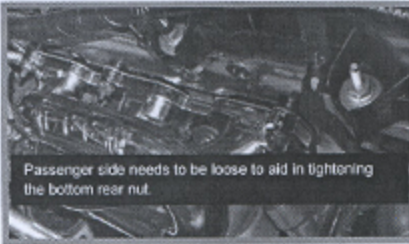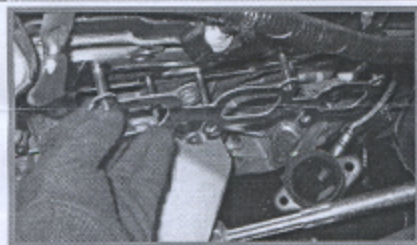

Passenger side needs to be loose to aid in tightening the bottom rear nut.

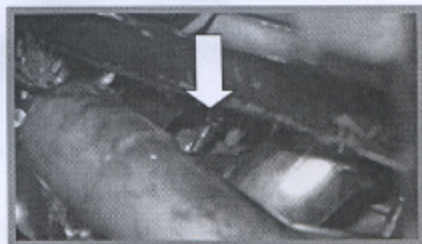

- For both the driver side and passenger side place the supplied BBK Gasket and header into place. Then Tighten. **NOTE!!!** The passenger side is a little more tricky. Make sure to leave all the nuts loose so the header has room to move. With the stock x-pipe hanging out of the way, the bottom rear nut needs to be tightened from behind the collector.

STEP 6

- After tightening both headers, lift the vehicle and re-install the stock x-pipe using the supplied hardware and reconnect the battery.

NOTE!!! Be sure to check and re-torque the header nuts after 500 miles of driving.



Join our Facebook page
www.facebook.com/bbkperformance



Follow us on Twitter
[@bbkperformance](https://twitter.com/bbkperformance)



Check us out on YouTube
www.youtube.com/bbkperformance

GO TO NEXT PAGE 1

WWW.BBKPERFORMANCE.COM

For any questions, email us:
tech@bbkperformance.com

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance Inc. accepts no responsibility for injuries or damage caused by or during the installation of this product.

INS-197



Join our Facebook page
www.facebook.com/bbkperformance



Follow us on Twitter
[@bbkperformance](https://twitter.com/bbkperformance)



Check us out on YouTube
www.youtube.com/bbkperformance

WWW.BBKPERFORMANCE.COM

For any questions, email us:
tech@bbkperformance.com

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance Inc. accepts no responsibility for injuries or damage caused by or during the installation of this product.

INS-197