


CORBEAU®

Corbeau '90-'93 Harness Bar


Corbeau USA, LLC provides the following mounting installation information as a general set of instructions to help you properly install your Corbeau Harness Bar. These instructions are not all-inclusive and may not cover every aspect of installation as some applications may require extra parts or interior modifications. Please contact Corbeau USA, LLC or your local authorized dealer if you have installation questions. We assume no responsibility for proper or improper installation. No warranty or representation is made as to this product's ability to protect the user from injury or death. The user assumes that risk. The effectiveness, warranty and longevity of this product are directly related to the manner in which it is installed used and/or maintained.

Installation Guidelines

1. Assemble the harness support rods as shown below using the provided heim joints and nuts. Leave at least 1/4" of thread showing on each heim joint to allow for adjustment during installation. At this time you will not fully tighten the nuts.



2. Unsnap the upper stock plastic shoulder belt bolt cover and remove the torx head bolt as shown. You will need to do this on both sides.

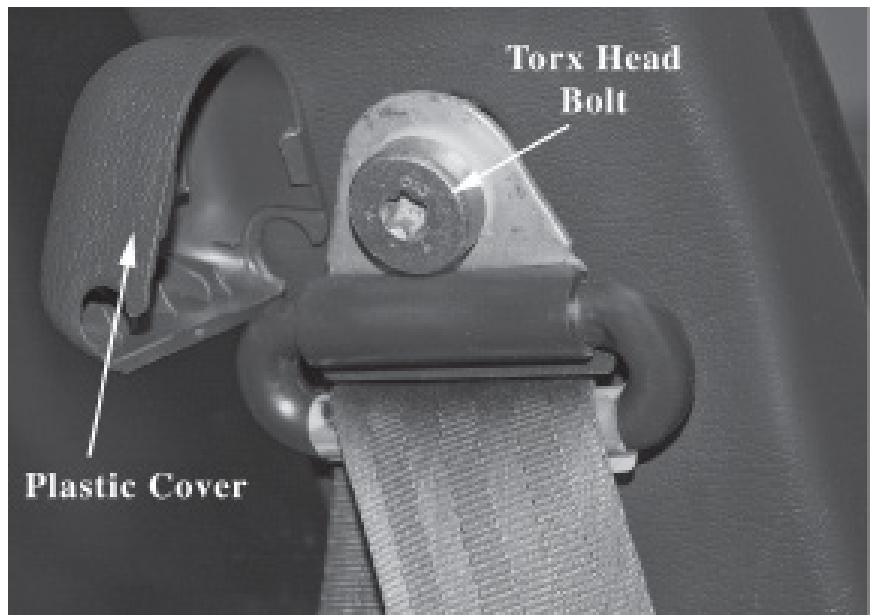


Corbeau USA, LLC


Phone: (801) 255-3737

Email: info@corbeau.com


3. Remove the stock retaining washer and bolt from the factory belt. Assemble the hardware as shown below and loosely secure to the vehicle. There may be slight tolerance variations from vehicle to vehicle, this means you may need to bend the ends slightly for a proper fit. See step 6 for the proper routing of the seat belt. Do not fully tighten the hardware at this time.

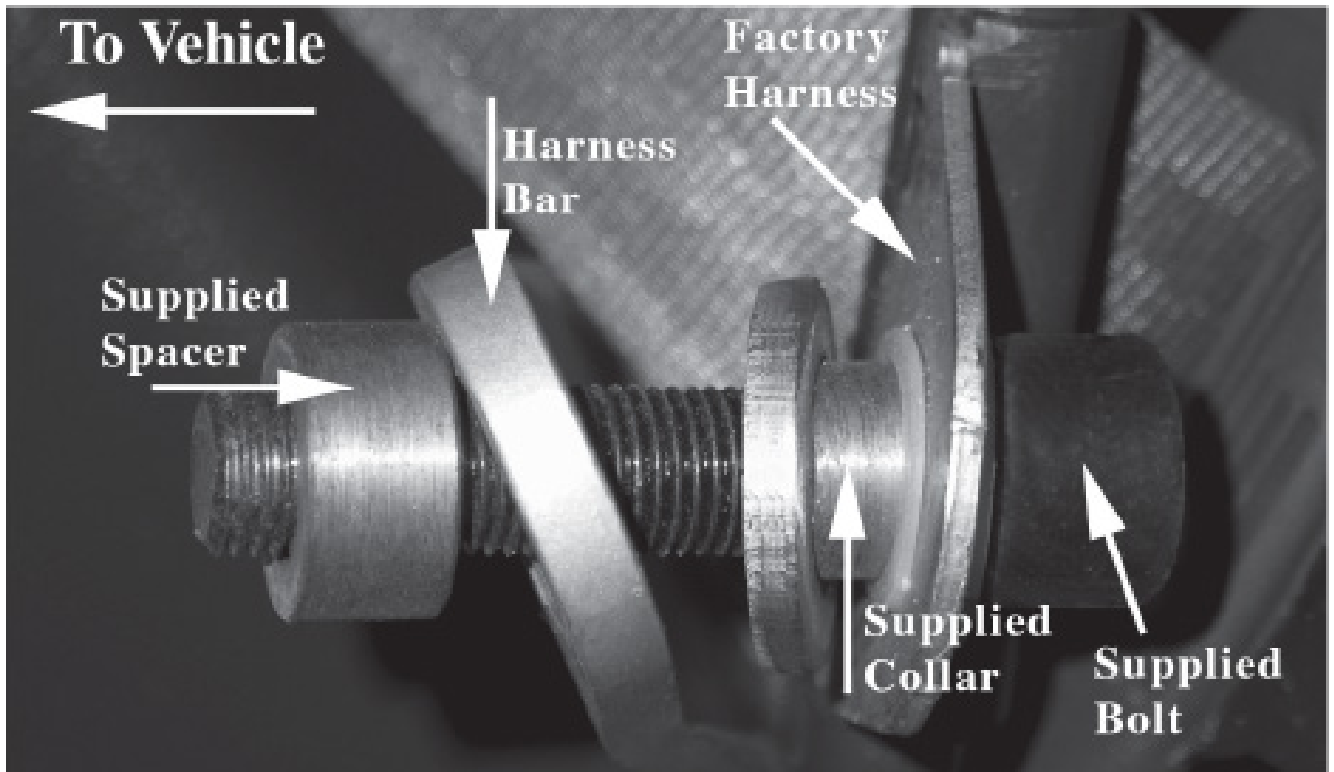


4. Loosen and remove the lower Torx bolts on both sides of the vehicle.

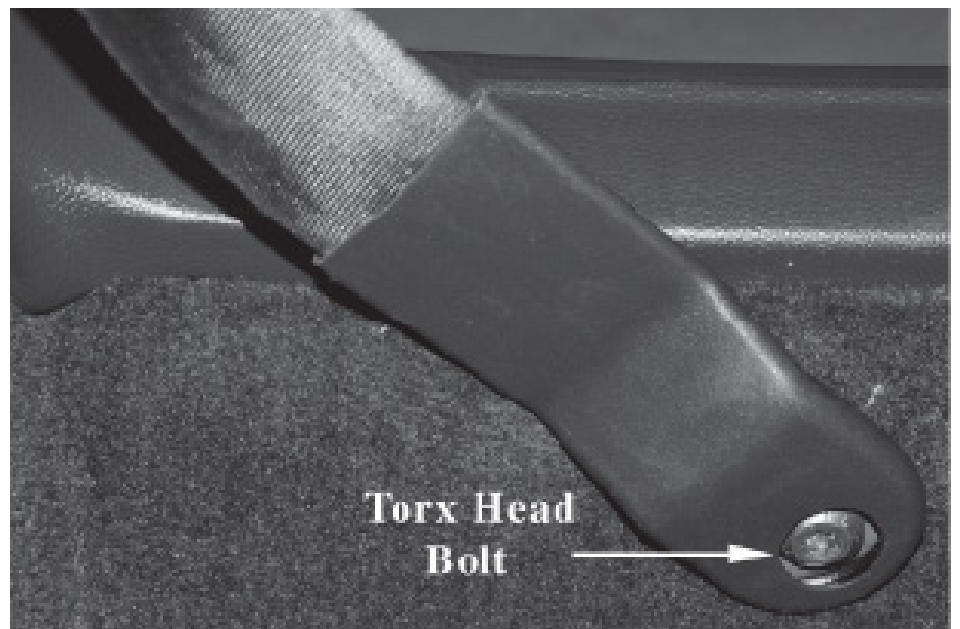

5. Using the supplied bracket, support rod, and hardware - assemble as shown below. Then re-install the stock Torx bolts into the stock mounting location. Please Note: Tighten the support rod nut and support rod mounting hardware before re-installation

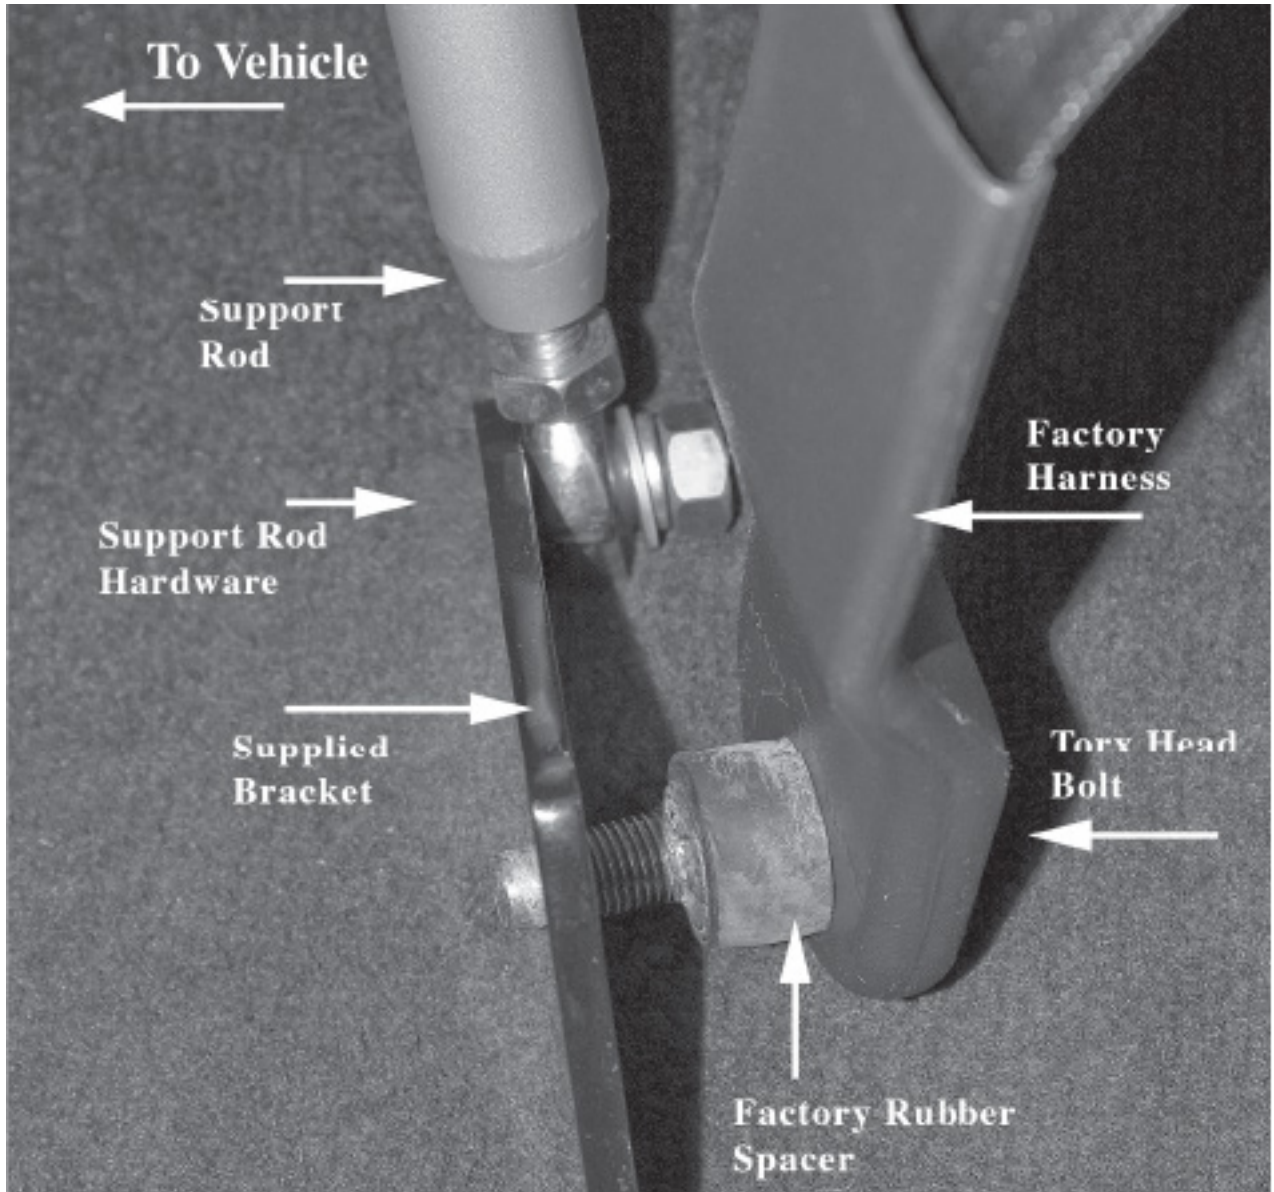

**Assembled side view*

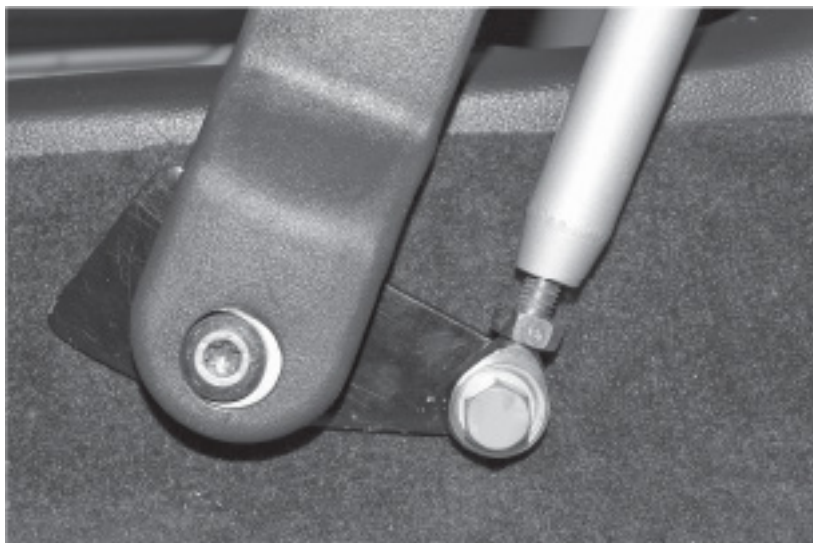

5. Connect the support rods to the harness bar using the supplied bolts and washers. Adjust the length as necessary before tightening. See the final installation below.

