


Thank you for choosing Classic Tube preformed tubing products. The replacement tubing may have additional large radius shipping bends. Lines with additional shipping bends will have a sticker on the shipping bend. Carefully straighten the section of the line that has the sticker on it. Make sure not to kink or damage the tubing.

Classic Tube uses annealed tubing so straightening the shipping bend is accomplished by following these steps. Start by holding one end flat on a table or flat surface. Start rolling out, pushing the tube into the surface until straight. To further straighten, take the tube firmly in both hands with a wide position. Then, work your hands back and forth along the shipping bend to straighten.

Each line will have a tag with a part number or description. This tag also indicates the location of the line on the vehicle to help aid in installation. Consult your vehicle service manual for brake system bleeding procedure.

View our instruction video at: [www.youtube.com/classictubes](http://www.youtube.com/classictubes)

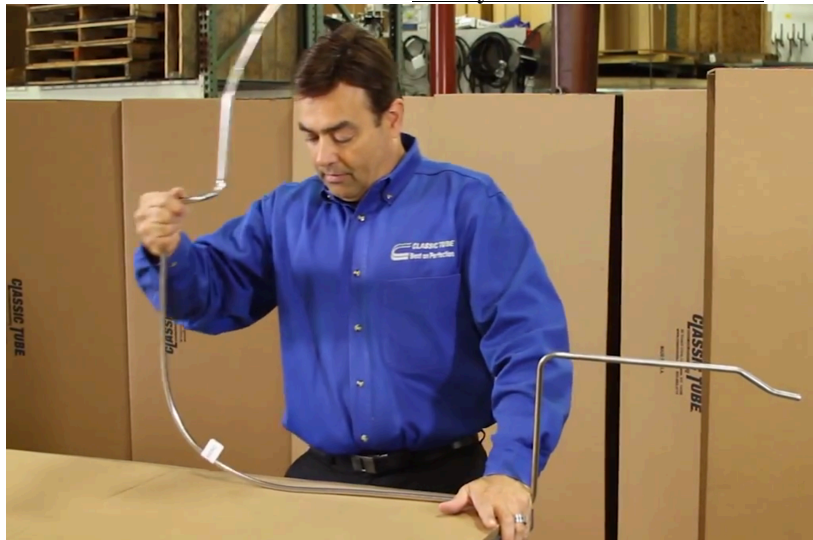

**Disclaimer:** Even though every attempt to ensure this information is complete and accurate, it is impossible to account for all possible circumstances or situations. Please consult with a qualified auto technician before attempting to perform any work you are not qualified to do. Automobiles can be hazardous to work on; be sure to take all necessary safety precautions. Failure to do so may result in property damage or personal injury. Certain motor vehicle standards and performance requirements may apply to your motor vehicle (such as Federal Motor Vehicle Safety Standards by the National Highway Traffic Administration). Be sure that your work is performed in accordance with such standards and that you do not disable any motor vehicle safety features.