

**Tools needed: 5/64 allen wrench, small & medium flat head screwdriver, small putty knife**



**1988-93 conv rear view mirror.**



**On some cars you will use the 5/64 Allen wrench. Slide mirror off the windshield bracket**



**On some other cars you will use a small screwdriver. Slide into the slot until the screwdriver slides under the spring.**




**To remove the lights use a medium screwdriver in the slot and pry up on the light.**



**Pulling the lights out will give you better access to remove the frame. Pull up on the frame and it should start to come apart.**



**Once the frame starts to come off, use the putty knife and work your way around the frame.**

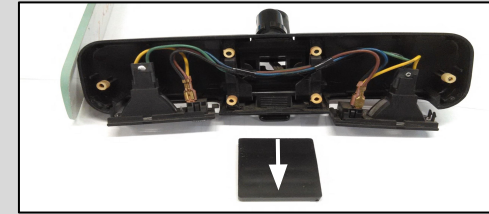

**Make sure that the plastic support arrow is pointing down and be sure the wires are in the channel. Make sure that the rubber bumpers do not fall off.**



**The mirror has a wide edge and a narrow edge.**



**Install the mirror into the frame. The wide edge of the glass will go in the side of the frame shown in the picture. You can leave the lights out until the mirror is installed.**



**With the mirror in the frame, Push the frame into the housing until you feel it snap in place.**