


MUSTANG 2018 HOOD VENTS SET SHADOW BLACK(G1) AD PART #: 1129CJF024A06AB

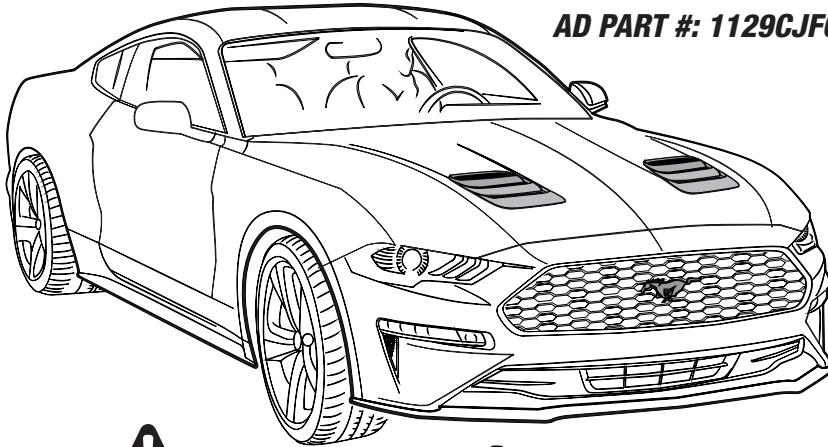

**READ CAREFULLY BEFORE
INSTALLATION**



WE RECOMMEND 2 PERSONS FOR INSTALLATION



AFTER INSTALLING

**DO NOT
WASH CAR**






**DRIVE SLOWLY
25 mph max**




24 hrs

TOOLS












3/8"





CHECK LIST

*ALREADY PRE-INSTALLED ON THE PART

ITEM	DESCRIPTION	DRAWING	AMOUNT
A	*DOUBLE SIDED TAPE		PRE-INSTALLED
B	*TIN SCREW 4.8 X 19 MM		PRE-INSTALLED
C	*SET SCREWS 3/16" X 1-1/2"		PRE-INSTALLED
D	*ORIGINAL GRILLE		PRE-INSTALLED
E	STAINLESS LOCKNUT 3/16"		4 PCS
F	SEALING WASHER		4 PCS
G	BLACK OUTS	RH  LH	2 PCS
H	ALCOHOL WIPES		2 PCS
I	ADHESION PROMOTER		1 PC

1 TAKE OUT ORIGINAL HOOD VENTS

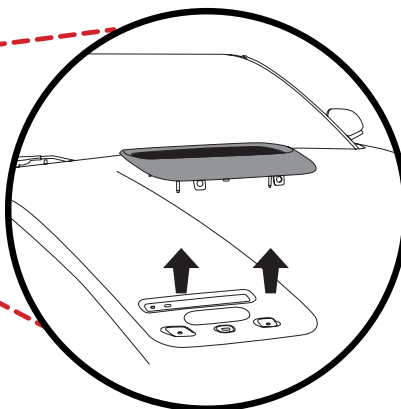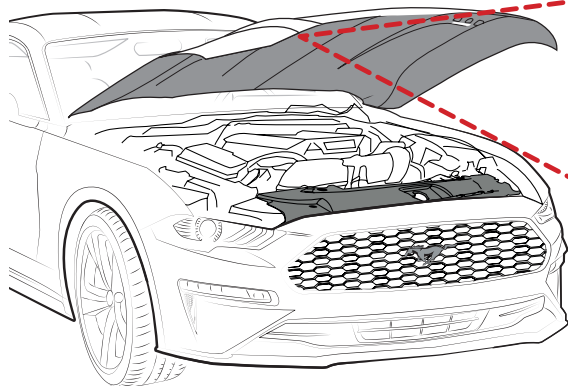

2 PLACE BLACKOUT

STEPS:




1. CLEAN SURFACE WITH ALCOHOL WIFE
2. APPLY WATER TO HOOD AND STICKER
3. PLACE & PRESS



! RUB WITH A SQUEEGEE




G

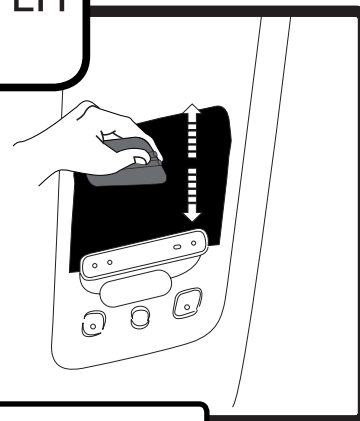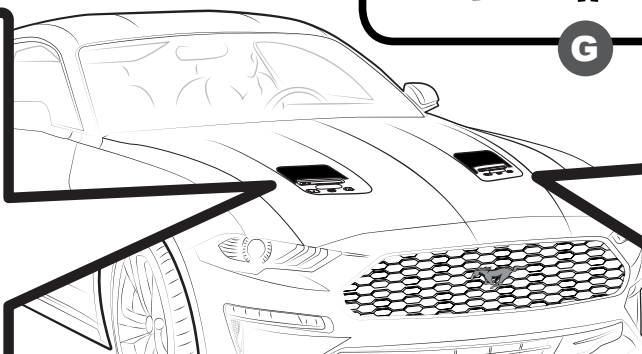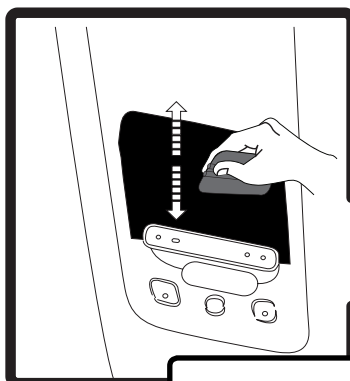


REMOVE ANY AIR BUBBLES AND WATER FROM THE CENTER OUTWARDS


3 PLACE PART AND TEST ASSEMBLY

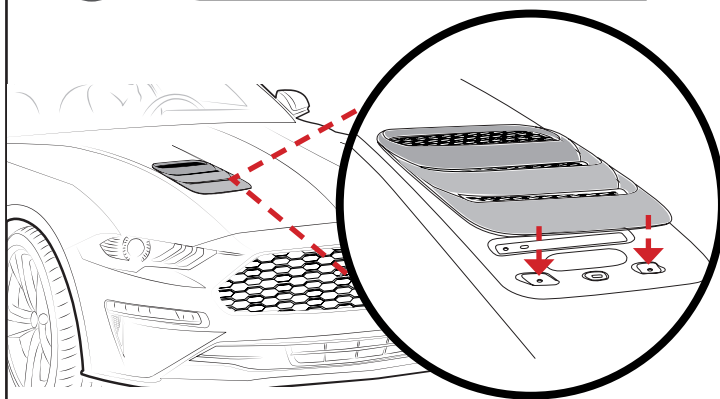


4 CLEAN

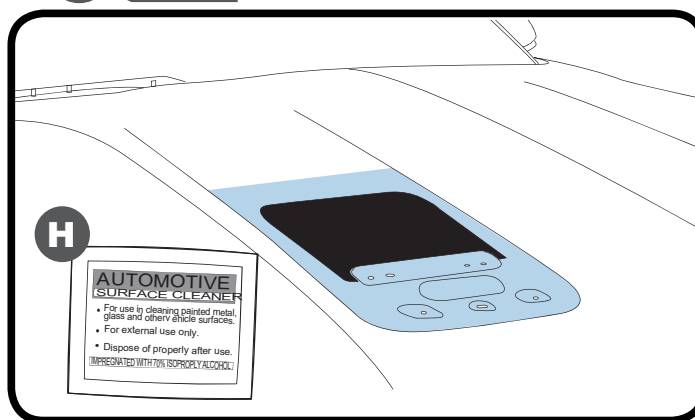



5 ADHESION PROMOTER

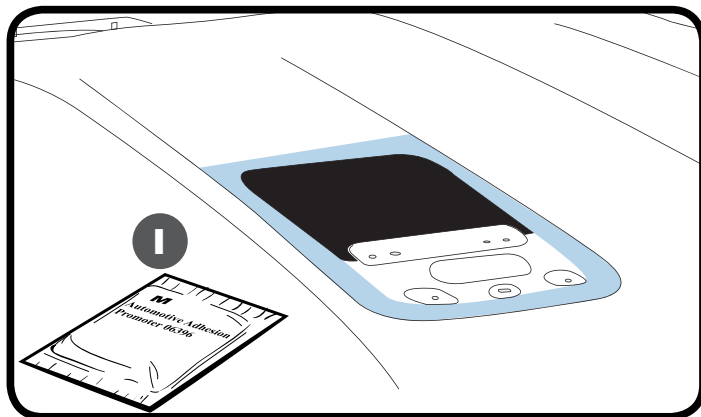


7 PLACE

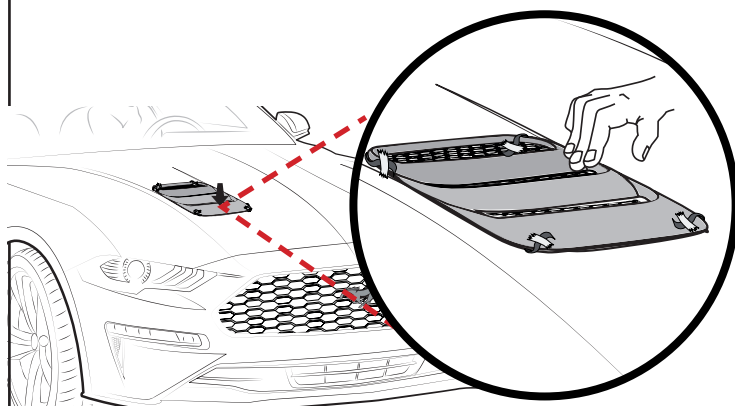


6 PEEL

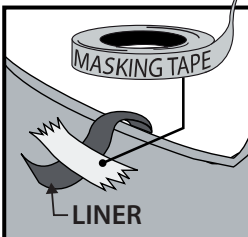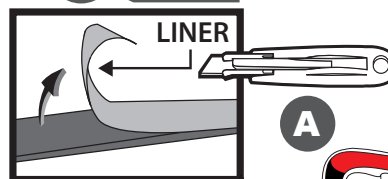


Hold the liner out

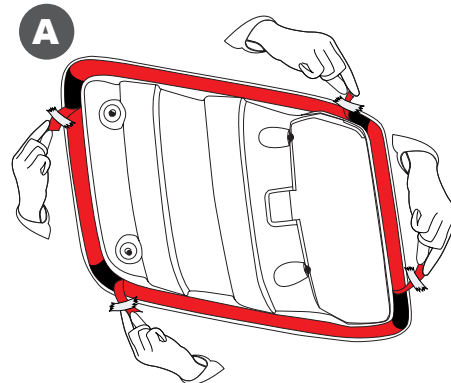

8 REMOVE LINER

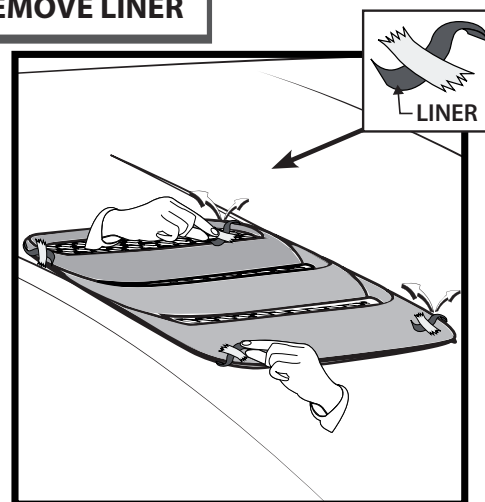




9 PRESS

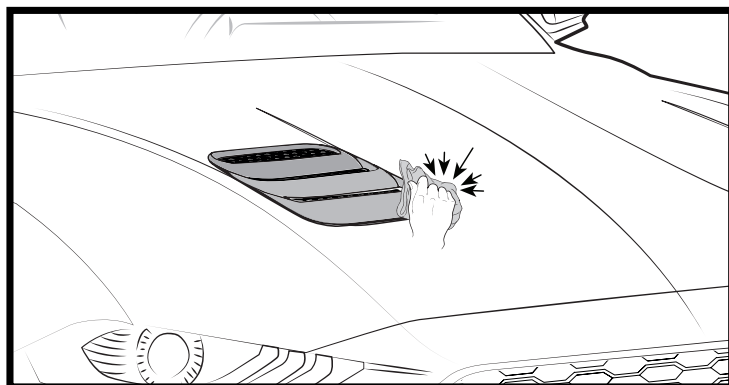

!
A full surface contact between tape and the vehicle is important for good adhesion performance. Contact is achieved by applying pressure. In practice, a pressure between 40 and 50 N/cm² is usually needed and an application temperature at or above 16 °C or 60 °F is necessary for both vehicle and the part to be installed



10 SCREW

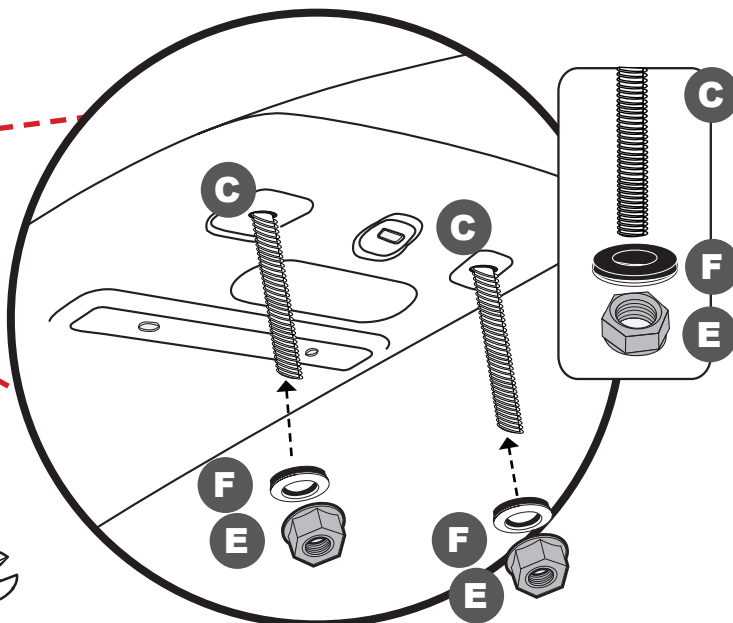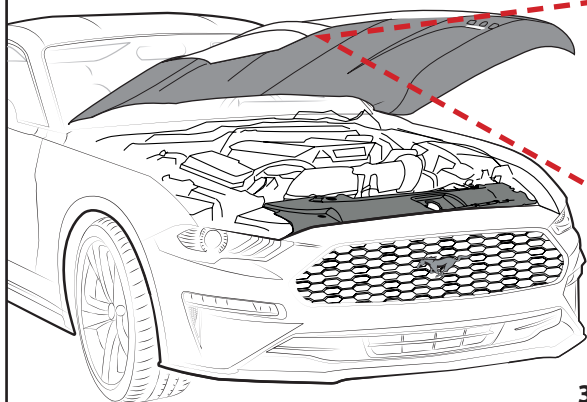

11 INSTALLED PART

