


1980-86 Hydroboost Brake Line Adapter Kit

(A) Brake Lines

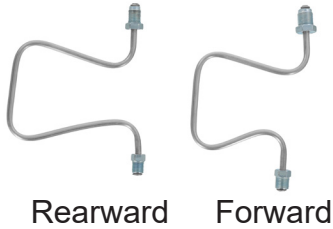


(B) Inverted Flare



(C) Bubble Flare



(D) Reference Guide

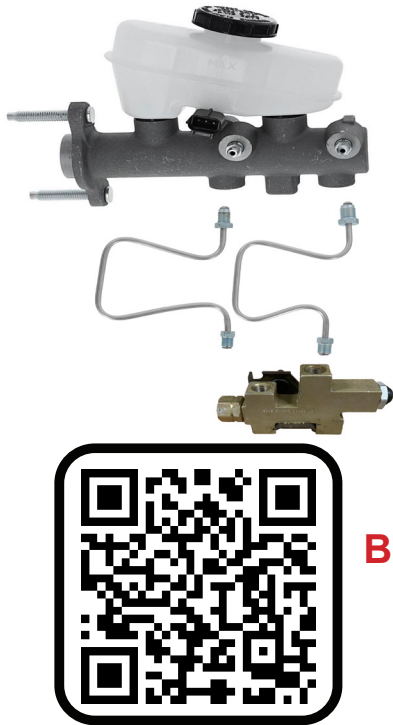

1. Start the installation of the forward line (A) by loosely threading the M12 bubble flare fitting (C) into the master cylinder. Turn it in just a few threads, do not fully seat or tighten it yet.
2. Begin installing the 7/16" inverted flare fitting (B) into the proportioning valve by threading it in just a few turns.
3. Thread the M10 bubble flare (C) fitting of the rearward line (A) into the master cylinder, turning it in just a few threads. Do not fully seat or tighten it at this stage.
4. Then thread the 3/8" inverted flare (B) fitting into the proportioning valve. Turn it in just a few threads, do not fully seat or tighten it yet.
5. Torque the master cylinder to hydroboost hardware to 19 lb-ft.
6. Torque the proportioning valve to strut tower hardware to 11 lb-ft.
7. Torque all brake line connection fittings to 13 lb-ft.
8. Proceed in the brake bleeding procedure.

Brake Bleeding Procedure Artical Here

***Minor adjustments are common between various foxbody platforms, tubing can be bent by hand if needed.**

***Master cylinder and proportioning valve not included.**

Disclaimer

By using this instruction sheet, you agree that other than as expressly stated in the LMR Terms and Conditions (Agreement) or as required by the laws of the state of Texas or applicable United States federal law (Applicable Law), this instruction sheet is provided "AS IS" and LMR does not make any specific representations or warranties about this instruction sheet. For example, LMR does not make any warranties about: (a) the content provided in this instruction sheet; (b) any specific features of this instruction sheet, or its accuracy, reliability, or ability to meet your needs. The knowledge and experience level of users of this instruction sheet vary widely; if you do not have adequate knowledge and experience to use this instruction sheet and safely accomplish the tasks described, please hire a professional to assist you for your safety and the safety of your vehicle and others.

Limitation of Liability

Except as required by Applicable Law, LMR, its affiliates, officers, directors, employees and agents will not be responsible for any loss of profits, revenues, business opportunities, goodwill, or anticipated savings, indirect or consequential loss, punitive damages caused by:

- Errors, mistakes, or inaccuracies in this instruction sheet
- Personal injury or property damage resulting from your use of this instruction sheet

This limitation of liability provision applies to any claim regardless of whether the claim asserted is based on warranty, contract, tort or any other legal theory.

Use this information at your own risk. Any injury, damage, or loss that may result from use of the tools, equipment, products, or information contained in this instruction sheet is the sole responsibility of the user.

Indemnity

To the extent permitted by Applicable Law, you agree to defend, indemnify and hold harmless LMR, its Affiliates, officers, directors, employees, agents, information providers, licensors, and other partners from and against any and all claims, damages, obligations, losses, liabilities, costs or debt, and expenses (including but not limited to attorney's fees) arising from: (i) your use of and access to this instruction sheet; (ii) your violation of any term of the Agreement; (iii) your violation of any third party right, including without limitation any copyright, property, or privacy right; or (iv) any claim that your actions caused damage to LMR or a third party. The defense and indemnification obligations will survive this Agreement and your use of this instruction sheet.

FIND YOUR NEXT MOD! SHOP 1000s OF PARTS ONLINE 24/7 @ LMR.COM