



2015+ Ford Mustang GT Wing Installation Manual

Components List:


- 1 x Airfoil
- 2 x Mustang Pedestals
- 2 x Carbon Mustang Base Plates
- 2 x Carbon Base Plate Gaskets
- 2 x Side plates
- 2 x Reinforcement Trunk Plates (Billet)
- 2 x Reinforcement Trunk Plates (Carbon)
- 2 x M6x55mm Long Bolt
- 2 x 1.5" M6 Big Washer
- 4 x M6 Small Washer
- 4 x M6x45mm Studs (for pedestal)
- 4 x M6 Nylon Insert Nut
- 4 x M6 APR Side Plate Bolt (for side plates)
- 4 x M8 Nylon Insert Nut
- 4 x M8x 25mm Bolt
- 3 x Allen Wrenches 3,4,5

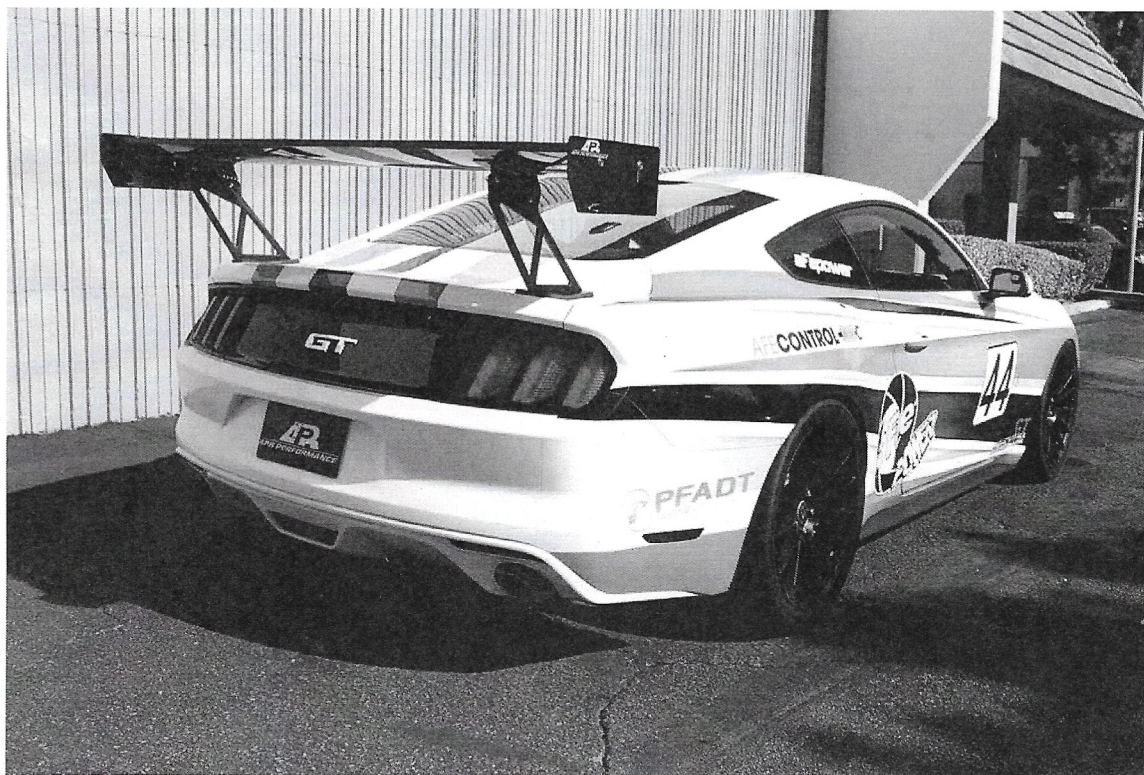


APR Performance, Inc.
225 Pacific Street
Pomona, CA 91768 U.S.A
Phone: (909) 594-3796 Fax: (909) 594-3926
sales@aprperformance.com

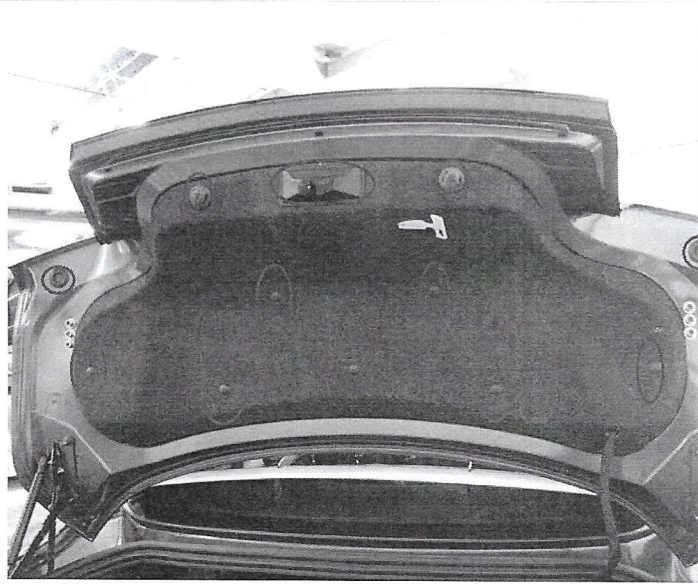


1. Proceed removing all the push-in pins, trunk rubber stoppers, two rubber caps, and insulation cover.

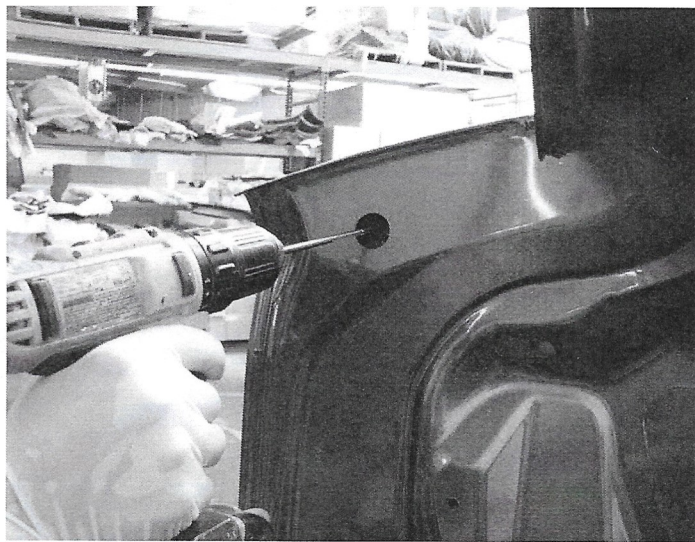


2. Once the rubber cap on each end of the trunk is removed, use a marker and mark the center of the circle. Use a $\frac{1}{4}$ " drill bit to drill the hole at the center of the circle. Repeat step to other side. Holes should measure 44" apart.

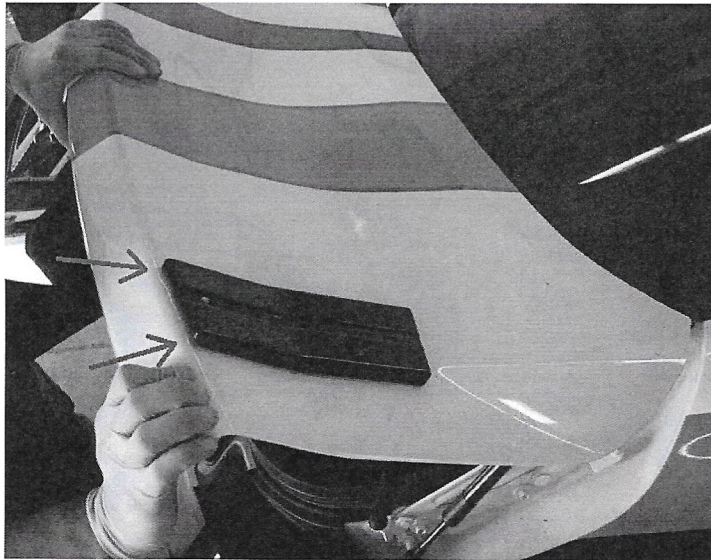


3. Choose a plate with the same contour shape as the trunk. Place left side and right side carbon fiber plate on the top of the trunk skin, line up the back hole on the plate to the hole you just drilled.

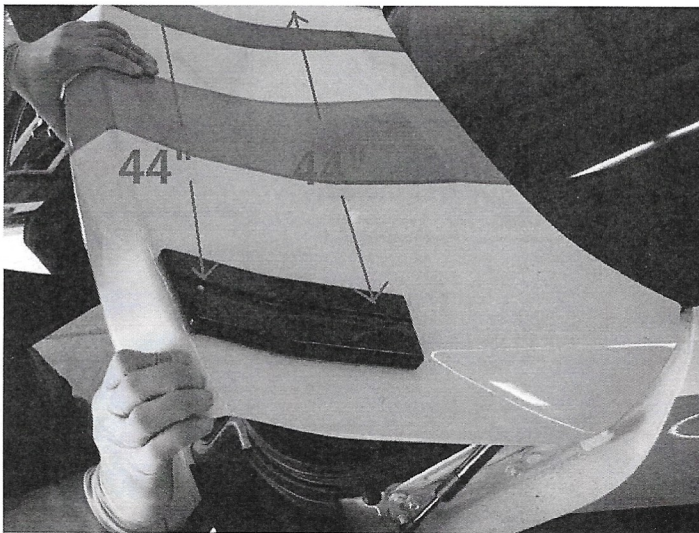


4. Align both side plates to 44" apart from center to center of the hole. Double check and make sure all measurements are squared up.
5. Proceed mark holes on the plate and drill them with $\frac{1}{4}$ " drill bits.

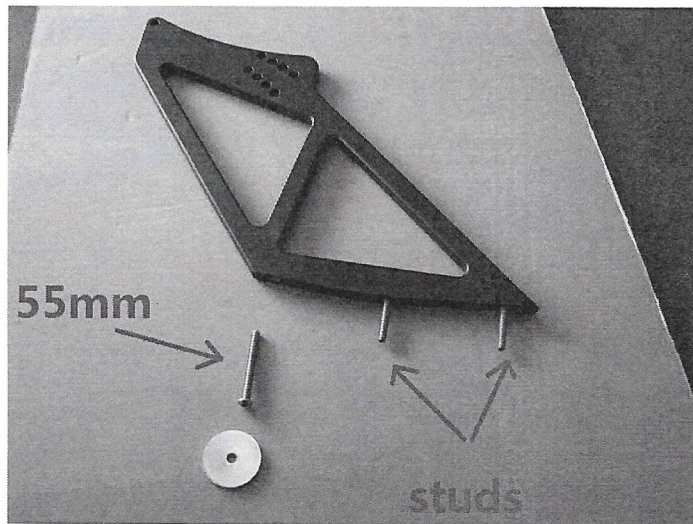


6. Assemble the billet pedestal with attachments. Put 2 threaded studs on the front of the pedestal. Long bolt and washer will go on at the end of the installation.

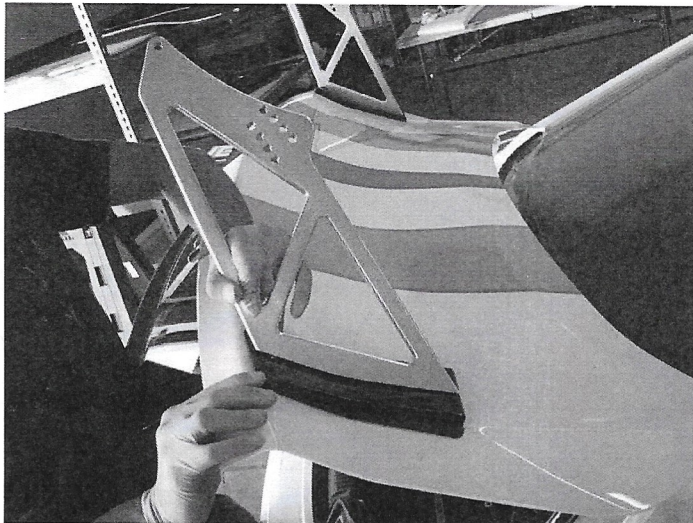


7. Start putting base plate gasket, base plate and pedestal altogether to the trunk. Make sure install the "Right" side pedestal to the right side of the trunk. The pedestal is CNC with a 5 degree angle on the bottom.

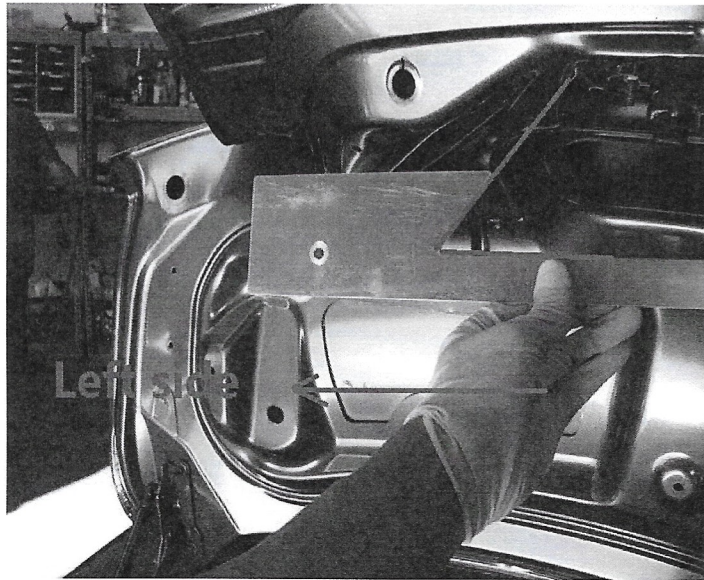

8. Find the billet reinforcement plate, with solid plate side facing you. Make sure you use the left side one for the left.

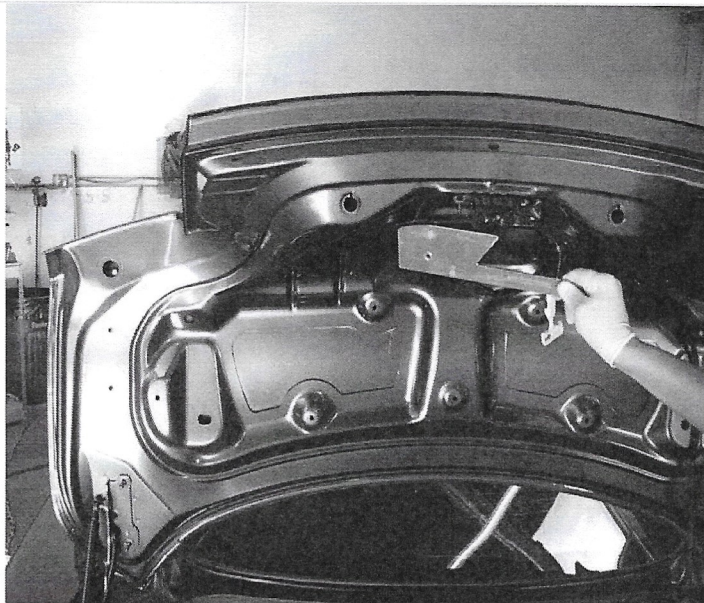

9. Insert it from the center section of the trunk to the cap hole. Align the hole on the reinforcement plate to the trunk hole you just drilled.

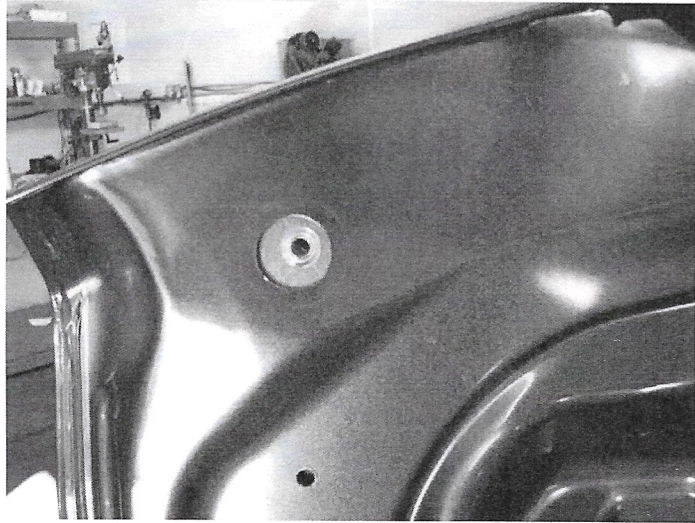

10. Here is the photo showing the reinforcement plate installed inside the trunk skin.



11. Use 1.5" 6mm washer and 55mm long bolt to secure the back hole with billet reinforcement plate in between. Use the carbon plate with nuts for the two front holes.



12. Install the wing foil onto both pedestals with wing foil under bracket sitting outside the pedestal.

13. Next, install the side plate with slotted cutout towards front leading edge of the wing. (Remember to adjust the side plate whenever you change the angle of the attack, always level it with the ground)

14. Double check and tighten all bolts and nuts, then reinstall the trunk insulator with push-in pins and rubber stopper.

Installation now is complete.