

CORBEAU®


Corbeau A22021

Corbeau USA, LLC provides the following mounting bracket installation information as a general set of instructions to help you properly install your Corbeau Seats and Brackets. These instructions are not all-inclusive and may not cover every aspect of installation as some applications may require extra parts or interior modifications. Please contact Corbeau USA, LLC or your local authorized dealer if you have installation questions. We assume no responsibility for proper or improper installation. No warranty or representation is made as to this product's ability to protect the user from injury or death. The user assumes that risk. The effectiveness, warranty and longevity of this product are directly related to the manner in which it is installed used and/or maintained.


Installation Guidelines

1. Adjust the sliders to the most forward position. This will allow access to the mounting holes in the front of the sliders.
2. The A22021 includes two identical bars. Take one of the bars and place it onto the sliders with the two inside holes lined up with the two holes in the front of the sliders. The two outside holes should be offset to the front of the bracket.
3. Bolt the A22021 to the slider using the included hardware.
4. Slide both sliders to the most rearward position. This will allow access to the mounting holes in the back of the sliders.
5. Take the remaining bar and place it onto the sliders with the two inside holes lined up with the two holes in the rear of the sliders. The two outside holes should be offset to the back of the bracket.
6. Bolt the A22021 to the slider using the included hardware.

top view

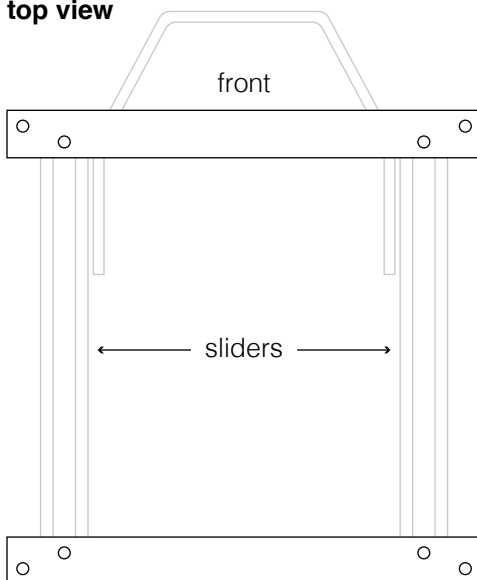

front view

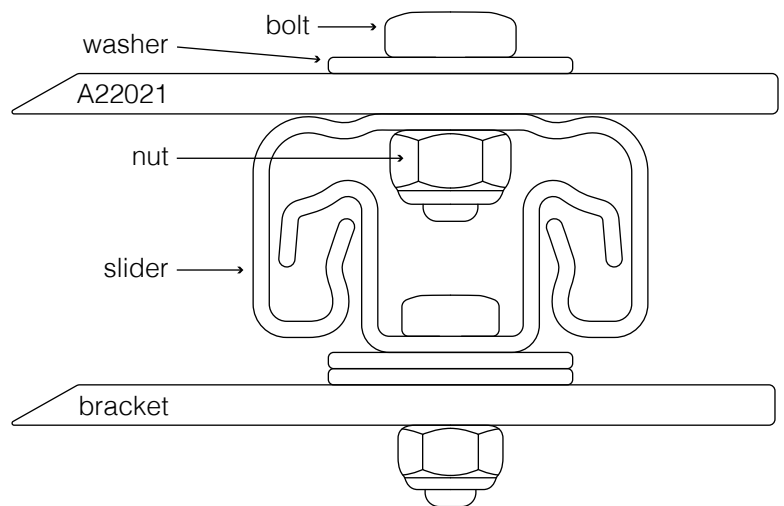

Corbeau USA, LLC

Phone: (801) 255-3737

Email: info@corbeau.com