

2005 – 2009 Mustang Detail Corral

CDC #0511-7000-12

About the Product:

The **Detail Corral** is designed and manufactured exclusively by Classic Design Concepts using OE quality materials. This product is intended for light weight storage. CDC will not be responsible for failure of product due to over loading.

Note: By design, the "Living Hinges" will become more flexible over time; this is not part failure. Read instructions thoroughly before installing.

Kit Components:

Detail	Corral	Assy	١.
--------------------------	--------	------	----

•	2 Threaded "E" Brackets	0511-5500-01
•	2 Threaded "S" Brackets	0511-5501-01
•	2 "S" Brackets w/out Threads	0511-5501-01
•	6 M6-1.0 x 6mm Set Screws	30000
•	4 M6-1.0 x 10mm Socket Cap Screws	30001
•	4 M6 Washers	55000
•	2 Push Pin Fasteners	65000
•	Installation Guide w/Templates	CD4II3BS

Tools Required:

- 3mm Allen Wrench
- 5mm Allen Wrench
- Push Pin Removal Tool
- Medium Strength Thread Locker


CDC Part #s

- Side Cutters
- Scissors
- X-acto Knife or Razor Blade

ORIGINATOR: Nick Alfano REVISION DATE: 05/18/2009 REVISION LEVEL: B
APPROVAL: Jeff Carroll ISSUE DATE: 7-7-06 PAGE: 1 of 4


Detail Corral Installation Procedure:

- 1. Open Trunk.
- 2. With a Push Pin removal tool, separate the wire harness from the deck lid.
- **3.** Carefully remove the Push Pin fasteners from the wire harness with Side Cutters and or a razor blade and discard.
- **4.** Cut out the provided templates with scissors or X-acto knife. Note: You will have a total of 3 templates. (Figure 1)
- **5.** Place appropriate templates as shown in Figure 2 and mark the bracket location with a permanent marker for all 6 locations. **Note:** Flip templates to mark opposite side of vehicle.

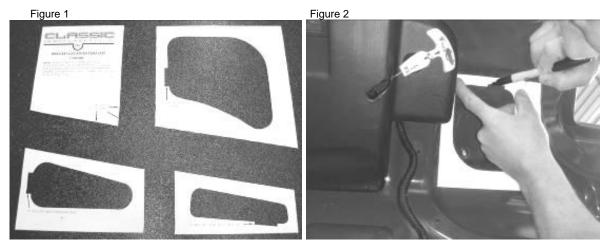

6. Install the 6 brackets as shown in Figure 3. We recommend using a small amount of medium strength thread locker on the threads of the set screws. Slide the brackets over the sheet metal and tighten the set screws with a 3mm Allen wrench.


<u>Note:</u> Make sure the threaded "S" Brackets are in the location shown in Figure 3. Caution: Do not over tighten screws.

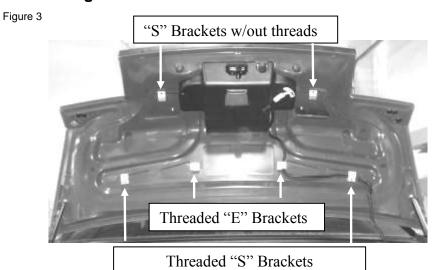


ORIGINATOR: Nick Alfano REVISION DATE: 05/18/2009 REVISION LEVEL: B APPROVAL: Jeff Carroll ISSUE DATE: 7-7-06 PAGE: 2 of 4

CD4II3BS

7. Route wire harness as shown in Figure.4. The "E" Bracket will accept the wire harness; make sure it is inserted fully to avoid interference.

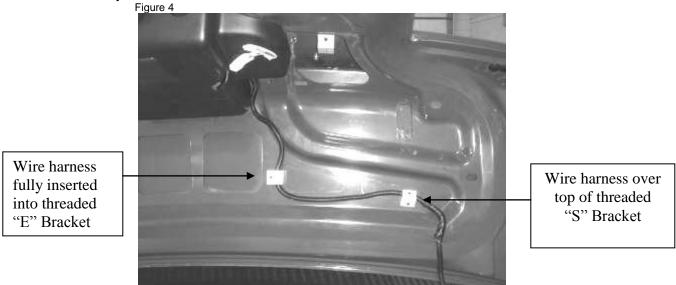

8. Install the **Detail Corral** Assy. Use the Push Pin fasteners for the top 2 locations as shown in Figure 5. **Note:** Do not press too hard as it may deform the panel. •Use the provided M6-1.0 x 10mm fasteners along with the M6 washers for the remaining 4 locations. Open the doors of the panel for access (Figure 6). Start all 4 fasteners before tightening, use thread locker and do not over tighten.

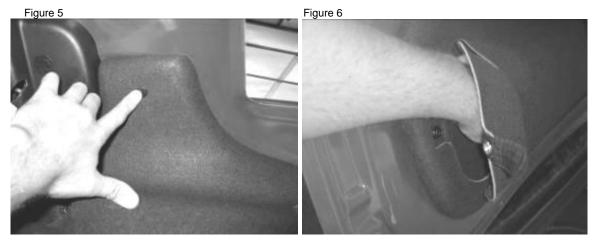

Thank you for choosing Classic Design Concepts for your restyling needs. If you have any questions or concerns regarding installation please contact

<u>Tech@classicdesignconcepts.com</u> or call 866-624-7997

ORIGINATOR: Nick Alfano REVISION DATE: 05/18/2009 REVISION LEVEL: B
APPROVAL: Jeff Carroll ISSUE DATE: 7-7-06 PAGE: 3 of 4

