

2004 Ford Mustang V8-4.6L SOHC VIN X

Vehicle > Technical Service Bulletins

KEYLESS ENTRY - KEYPAD DIAGNOSTICS

TSB 06-15-8

08/07/06

KEYPAD DIAGNOSTICS - DEALER INSTALLED ACCESSORY

FORD:

1998-2006 Taurus

1999-2003 Escort

1999-2006 Mustang

2000-2006 Focus

2002-2005 Thunderbird

2005-2006 Five Hundred, Freestyle

2006 Crown Victoria, Fusion

1998-2006 Expedition, Explorer, F-150, Ranger

1999 F-250 Light Duty

1999-2003 Windstar

1999-2006 F-Super Duty

2000-2005 Excursion

2000-2006 E-Series

2001-2003 Explorer Sport

2001-2005 Explorer Sport Trac

2001-2006 Escape

2004 F-150 Heritage

2004-2006 Freestar

LINCOLN:

1998-2006 Town Car

2000-2006 Lincoln LS

2006 Zephyr

1998-2006 Navigator

2002-2003 Blackwood

2003-2005 Aviator

2006 Mark LT

MERCURY:

1998-2005 Sable

1999-2002 Cougar

2005-2006 Montego

2006 Grand Marquis, Milan

1998-2006 Mountaineer

2004-2006 Monterey

2005-2006 Mariner

ISSUE

Some vehicles may experience a concern with the keyless entry keypad. In order to properly diagnose the concern with the keyless entry keypad, it is important to identify whether the keypad is a factory installed style (wired) or a Genuine Ford Accessory (GFA) radio frequency (RF) style keypad.

ACTION

Use the following Service Procedure to identify GFA RF keypads and provide diagnostic service tips.

SERVICE PROCEDURE**IDENTIFICATION:**

1. Production installed keyless entry keypads are mounted flush with the surface of the vehicle and are wired directly to the module controlling the vehicle's keyless entry system. This style keypad can be diagnosed using the appropriate Workshop Manual (WSM), Section 501-14.

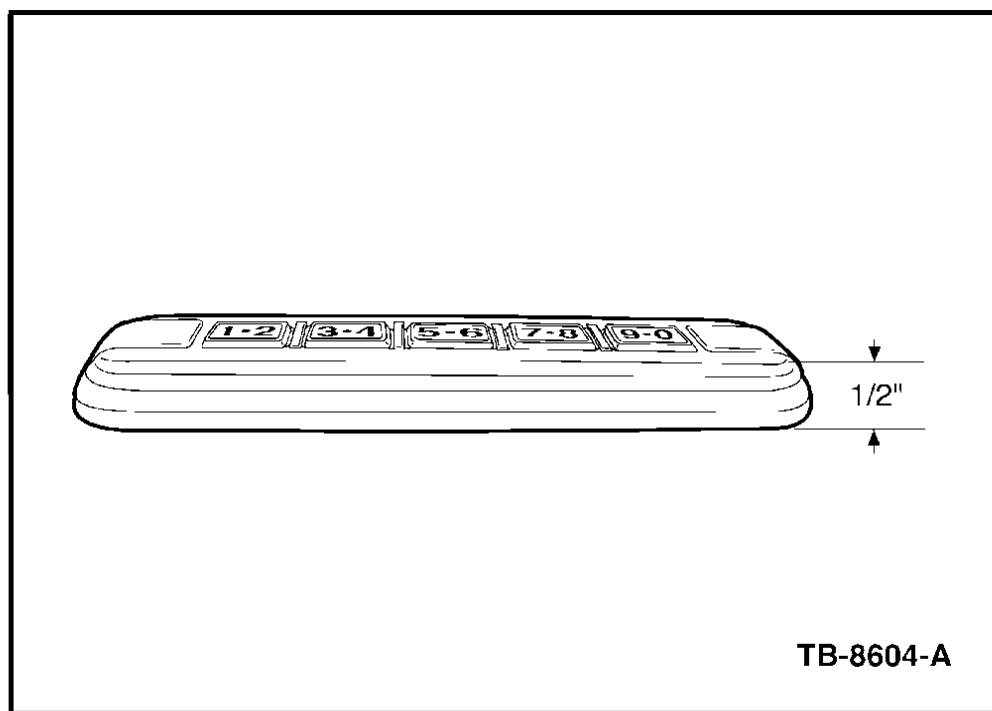


Figure 1

2. Dealer installed GFA RF keypads are adhesive backed and protrude approximately 1/2" (13 mm) from the surface of the vehicle and there are no specific diagnostics available in the WSM (Figure 1).

NOTE

THIS RF KEYPAD WAS ALSO USED IN PRODUCTION ON 2004 F-SUPER DUTY VEHICLES BUILT PRIOR TO 12/3/2003. REFER TO WSM, SECTION 501-14 FOR RF KEYPAD DIAGNOSTICS FOR THESE VEHICLES.

GENUINE FORD ACCESSORY KEYPAD DIAGNOSTIC TIPS

1. The keypad operates similarly to a remote keyless entry (RKE) transmitter and is programmed using a similar procedure.

Although the RF keypad is not specifically addressed in the WSM, the RKE transmitter programming portion of the WSM, Section 501-14 can be used as a guide

NOTE

THE 7-8 AND 9-0 BUTTONS ON THE KEYPAD MUST BE PRESSED SIMULTANEOUSLY DURING THE PROCEDURE IN ORDER FOR THE KEYPAD TO BE RECOGNIZED AS AN ADDITIONAL REMOTE TRANSMITTER.

Since the GFA RF keypad is essentially another RKE transmitter, the transmitter diagnostic pinpoint tests in the vehicle's WSM can also be referenced even though the buttons serving the lock / unlock functions will differ

2. The GFA RF keypad is serviced as an assembly. The internal battery cannot be replaced separately.

3. If the master code or owner selectable code is lost or forgotten, the GFA RF keypad must be replaced. These codes are not stored in any vehicle module (with the exception of 2004 F-Super Duty vehicles produced prior to 12/3/2003).

4. The GFA RF keypad and all RKE transmitters (the number of transmitters allowable will vary by vehicle) must be reprogrammed together anytime the keypad is replaced, an RKE transmitter is replaced, or the module controlling the keyless entry system on the vehicle (GEM/SJB/VSM/DDM etc.) is replaced.

NOTE

THERE IS AN EXCEPTION TO TIP 4 FOR VEHICLES EQUIPPED WITH INTEGRATED KEYHEAD TRANSMITTERS (IKTs) (FUSION/MILAN/ZEPHYR). THE GFA RF KEYPADS FOR VEHICLES WITH IKTs MUST BE PROGRAMMED INDEPENDENTLY FROM THE IKTs. TURN THE IGNITION FROM "OFF" TO "RUN" 8 TIMES WITHIN 10 SECONDS, WITH THE 8TH TIME ENDING IN "RUN". THE DOOR LOCKS WILL CYCLE TO CONFIRM ENTERING PROGRAMMING MODE. PRESS THE 7-8 AND 9-0 BUTTON ON THE KEYPAD SIMULTANEOUSLY TO SEND A LOCK SIGNAL. TURN IGNITION TO OFF. THE LOCKS WILL CYCLE AGAIN TO INDICATE THE END OF THE PROGRAMMING MODE.

5. The keypad will normally illuminate for 5 seconds after one or more buttons are pressed, and the illumination will immediately turn off if the 7-8 and 9-0 buttons are pressed simultaneously (lock all doors). The keypad contains an optical sensor and will not illuminate under bright lighting conditions. The keypad may only illuminate briefly in colder temperatures in order to maximize the battery power available to transmit a lock/unlock signal. The temperature at which this occurs will vary depending upon the keypad battery age and condition. Both of these conditions are a normal function of the Power Save Mode and do not indicate a need to replace the keypad.

6. After entering the keypad code, the system may unlock the driver's door, lock it, then unlock it again, and the keypad will not even briefly illuminate. This is the Alert Mode and is an indication that battery power is very low and the keypad must be replaced.

7. The keypad also contains an Anti-scan feature. If the wrong code has been entered 7 times (35 consecutive button presses) the keypad is disabled for one minute and the keypad lamp will flash during this time.

WARRANTY STATUS: Eligible Under Provisions Of New Vehicle Limited Warranty Coverage

DEALER CODING**CONDITION BASIC PART NO. CODE 14A626 42**

NOTE: The information in Technical Service Bulletins is intended for use by trained, professional technicians with the knowledge, tools, and equipment to do the job properly and safely. It informs these technicians of conditions that may occur on some vehicles, or provides information that could assist in proper vehicle service. The procedures should not be performed by "do-it-yourselfers". Do not assume that a condition described affects your car or truck. Contact a Ford, Lincoln, or Mercury dealership to determine whether the Bulletin applies to your vehicle.

Disclaimer